Appendix "B" - Cache

The Cache is a combination of elements and text set to the correct size and symbology that are available to copy into the files in which you are working. The Cache is included in the reference file, PLANSV8.DGN, that is located in the ODOT workspace at:

Internal ODOT staff http:\\SCDATA3\ODOT_space\standards\ref ftp://ftp.odot.state.or.us/isb/appeng/Microstation/Version8/

Figure B-1 Cache

See Figure B-1.

