



OREGON STATE FIRE MARSHAL

ENGINE PROGRAM

OREGON STATE FIRE MARSHAL
3991 FAIRVIEW INDUSTRIAL DR. SE
SALEM, OR 97302
503-378-3473

OPERATIONS BULLETIN #24-01

Date: February 8, 2024
Apparatus: Type 3 – 2024 & 2025 International HV507
Subject: Pump-and-Roll

The Type 3 Engines can pump while stationary with the main pump, however the main pump, when engaged, will not allow the engine to move. To pump-and-roll, you will need to use the Auxiliary pump.

A recommended procedure is to engage the tank-to-pump for the Auxiliary pump prior to leaving the station or departing for the call. This will save valuable time on scene and allow immediate engagement of the fire as you arrive at the fire.