



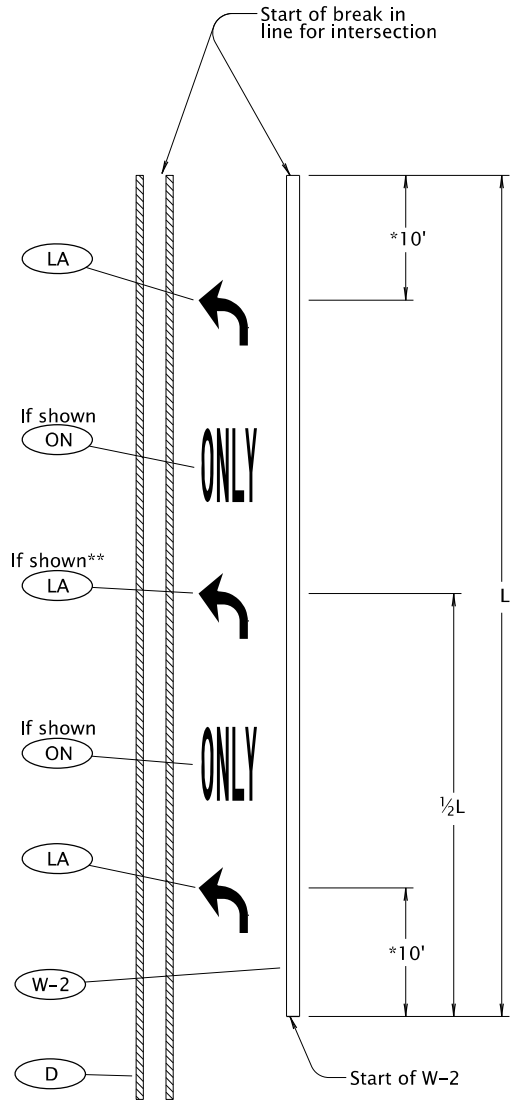

LANE USE ARROW PLACEMENT FOR TURN LANE
DETAIL "A"

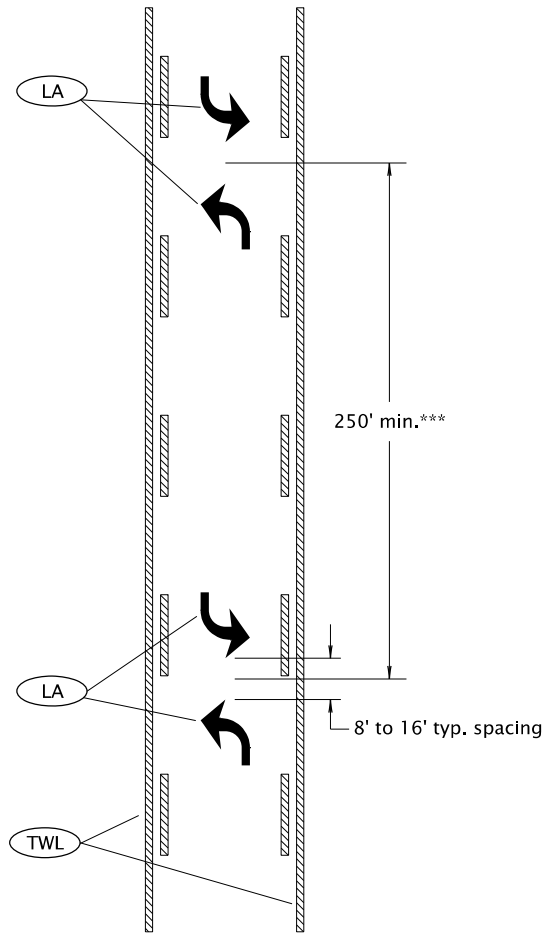

TWO-WAY LEFT TURN LANE ARROW PLACEMENT
DETAIL "B"

General Notes:

- 1) Center pavement marking legends within the lane.
- 2) Placement of lane use arrows with respect to the 8" wide white line (W-2) channelization shown in Detail "A" applies to both left and right turn lanes.
- 3) Center "ONLY" markings between lane use arrows.

- * 15' when installing elongated arrows.
- ** When L is greater than 400', install 3rd lane use arrow at $\frac{1}{2} L$ as shown in Detail "A".
- *** Double arrows to be placed at even intervals, proportioned within block or as shown.

To be accompanied by Standard Dwg. Nos. TM500 thru TM504

The selection and use of this Standard Drawing, while designed in accordance with generally accepted engineering principles and practices, is the sole responsibility of the user and should not be used without first consulting a Registered Professional Engineer.

All materials shall be in accordance with the current Oregon Standard Specifications.			
OREGON STANDARD DRAWINGS			
TURN ARROW MARKING DETAILS			
2024			
DATE	REVISION DESCRIPTION		
07-2020	Extended accompanied by drawings to Include TM504		
CALC. BOOK NO.	N/A	SDR DATE	07-01-2020
			TM531