
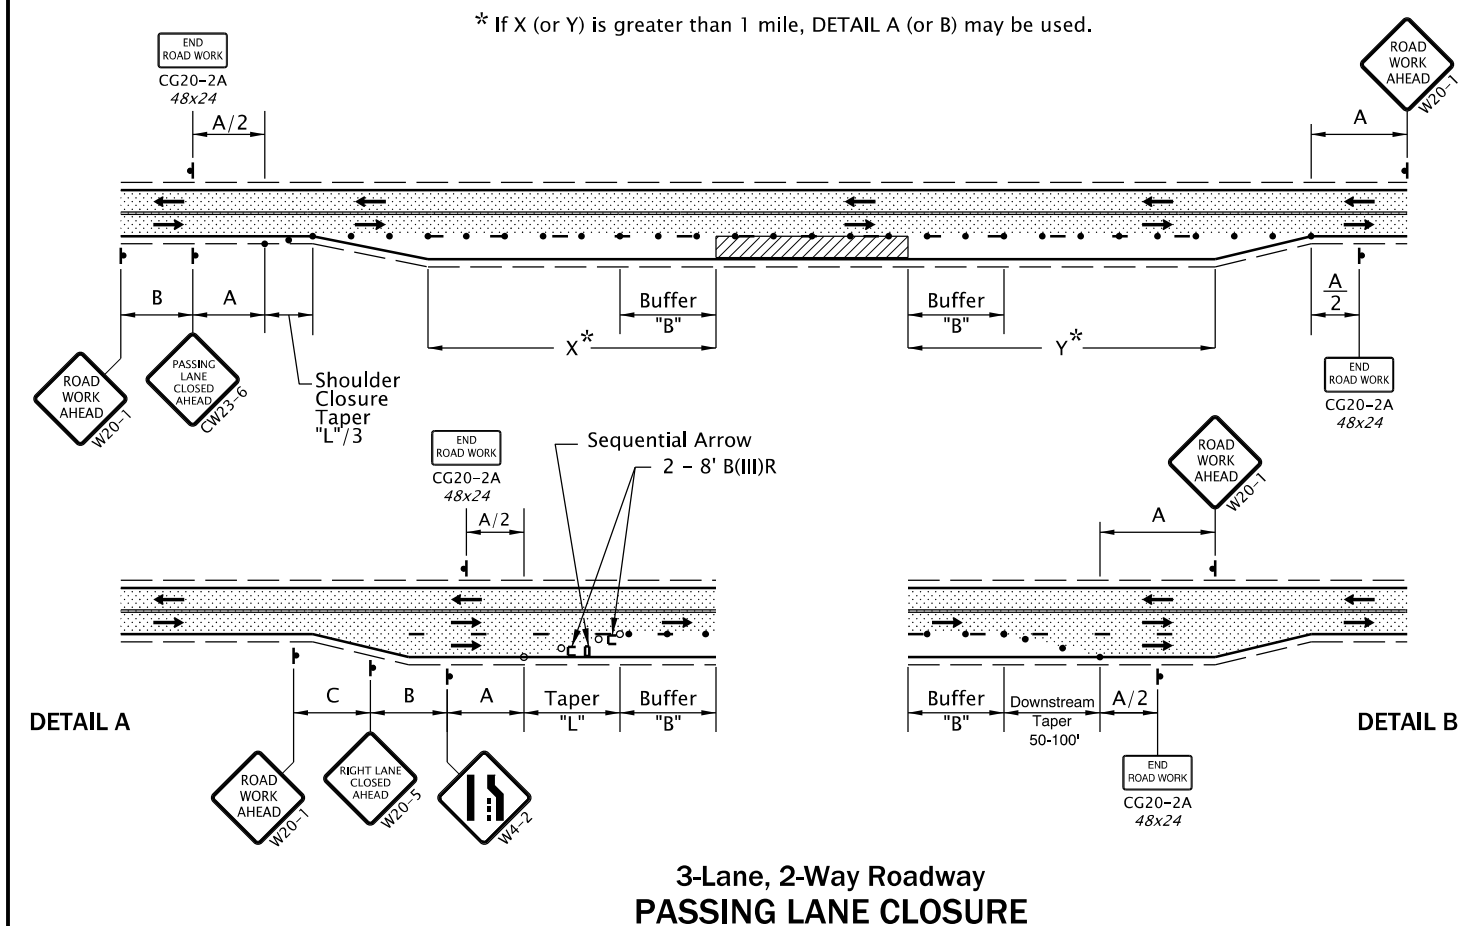
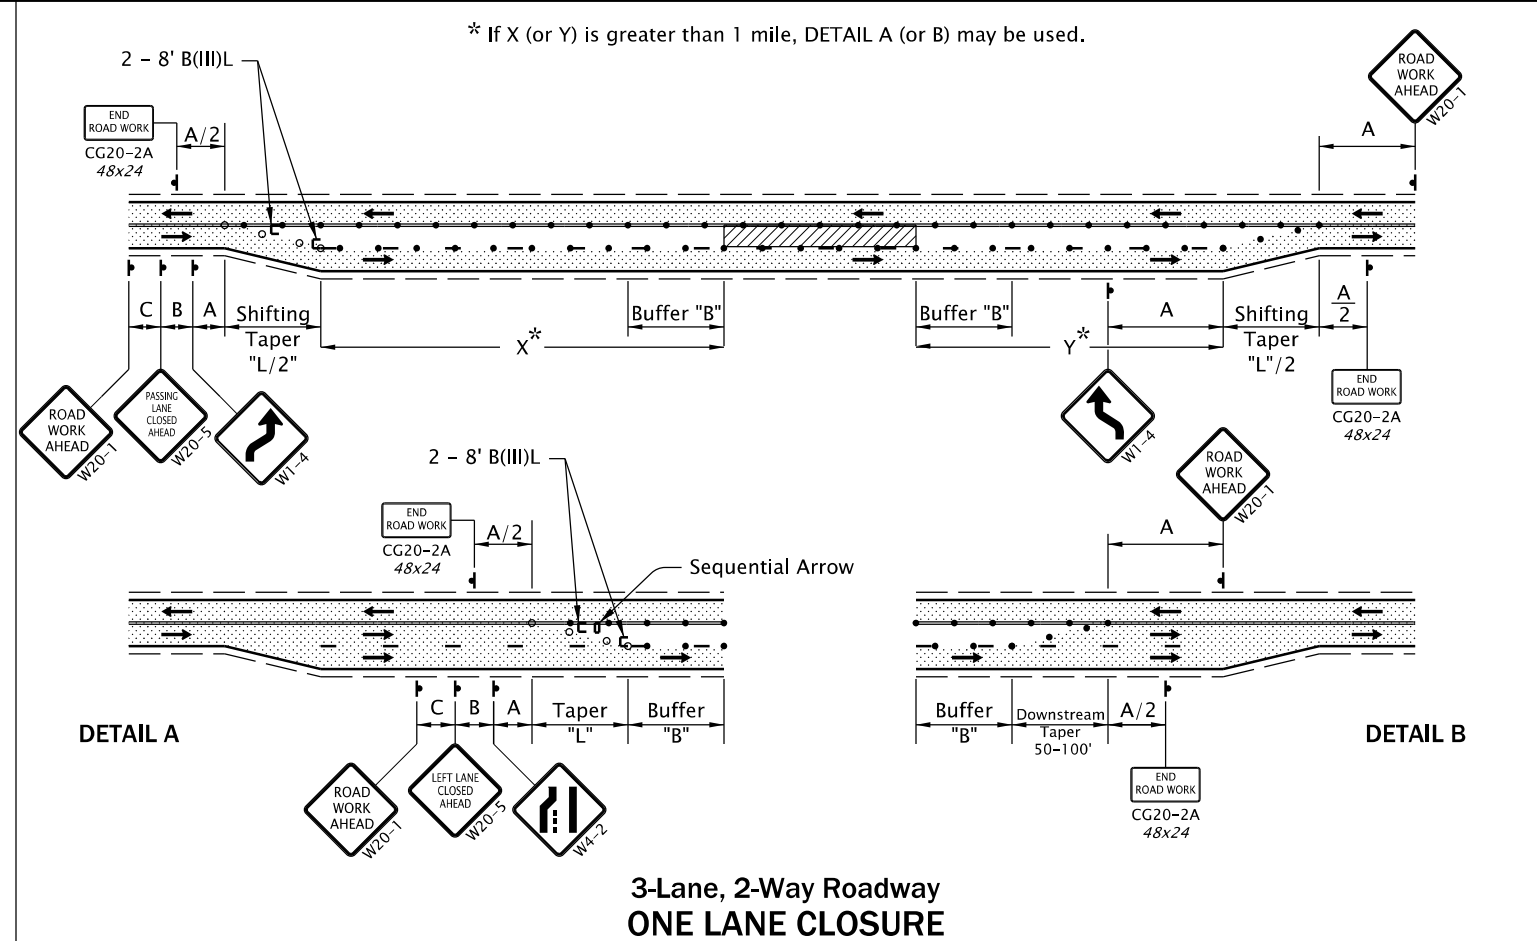


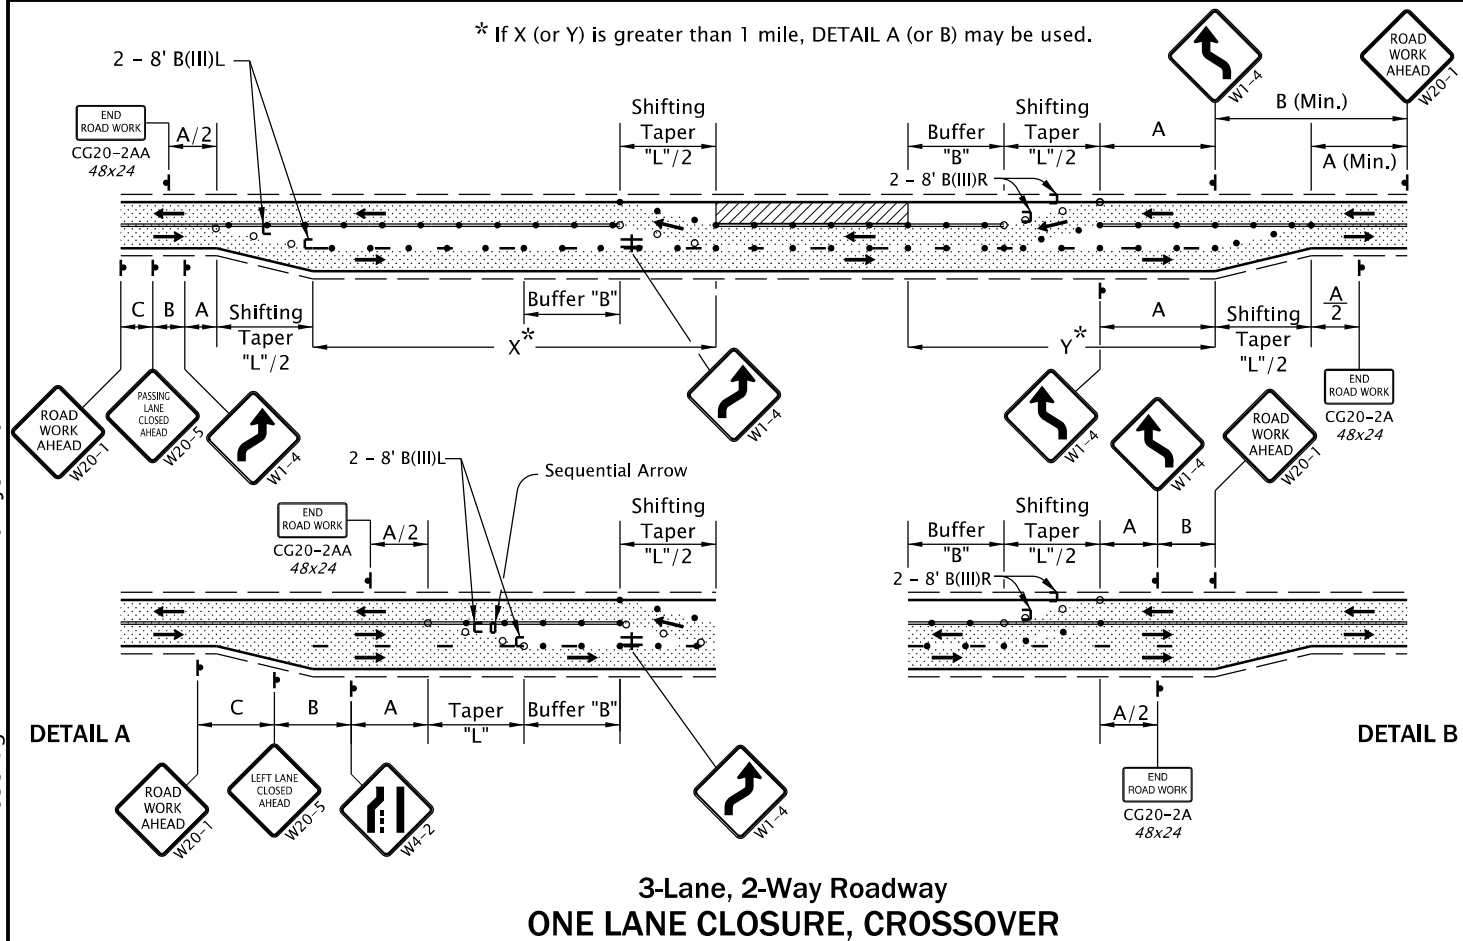

GENERAL NOTES FOR ALL DETAILS:

- Install temporary striping as directed.
- Signing and other TCD shown to be installed in conjunction with the work areas, shall move with the work areas.
- To determine Taper Length ("L") and Buffer Length ("B"), use the "MINIMUM LENGTHS TABLE" on Dwg. No. TM800.
- Cover all applicable existing passing lane signing prior to installing TCD.
- Install Type III barricades in closed lanes at 1/4 mile intervals.
- When passing is allowed in opposing lanes, restrict passing with double yellow centerline and appropriate signing as directed.
- Channelization devices may be placed on 10' around the Work Area for emphasis or if the area is to be exposed to traffic on both sides simultaneously.
- Install a "BICYCLES ON ROADWAY" (CW11-1) sign in advance of the closure when a bike lane is closed, or when the shoulder is closed and bikes are expected.

- To determine sign spacing A, B, and C, use "TRAFFIC CONTROL DEVICES (TCD) SPACING TABLE" on Dwg. No. TM800.
- When the length of the area under construction is less than 600 ft. use a DOUBLE REVERSE CURVE (W24-1) sign in place of the first REVERSE CURVE (W1-4) sign in each direction.
- 28" TUBULAR MARKERS
See TCD Spacing Table on TM800 for max. spacing.
- TEMP. PLASTIC DRUMS
See TCD Spacing Table on TM800 for max. spacing.

UNDER TRAFFIC
UNDER CONSTRUCTION

The selection and use of this Standard Drawing, while designed in accordance with generally accepted engineering principles and practices, is the sole responsibility of the user and should not be used without first consulting a Registered Professional Engineer.

All materials shall be in accordance with the current Oregon Standard Specifications.

OREGON STANDARD DRAWINGS
NON-FREEWAY MULTI-LANE SECTIONS

2024

DATE	REVISION	DESCRIPTION
07-2022	1	Replaced temporary traffic control sign in detail.
CALC. BOOK NO.	N/A	SDR DATE
		01-JUL-2022

TM853

Effective Date: June 1, 2026 – November 30, 2026