



DET1304.dgn 30-JUN-2023

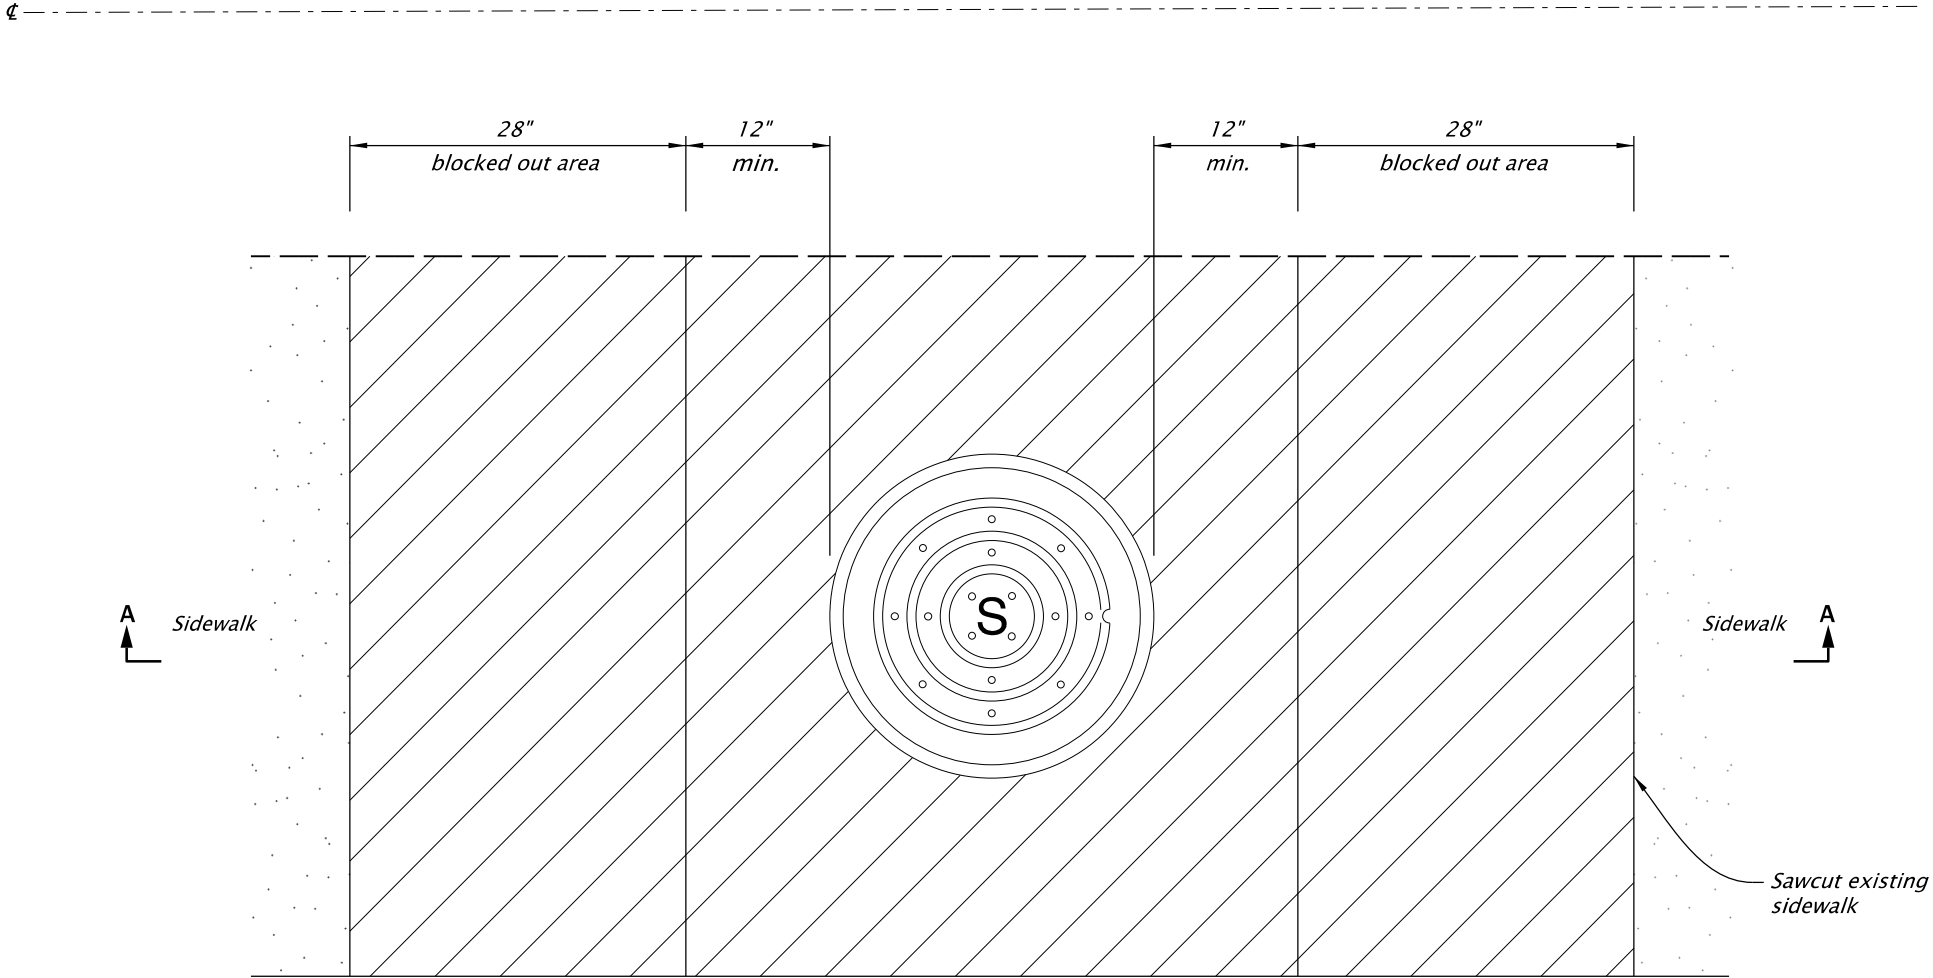

PLAN

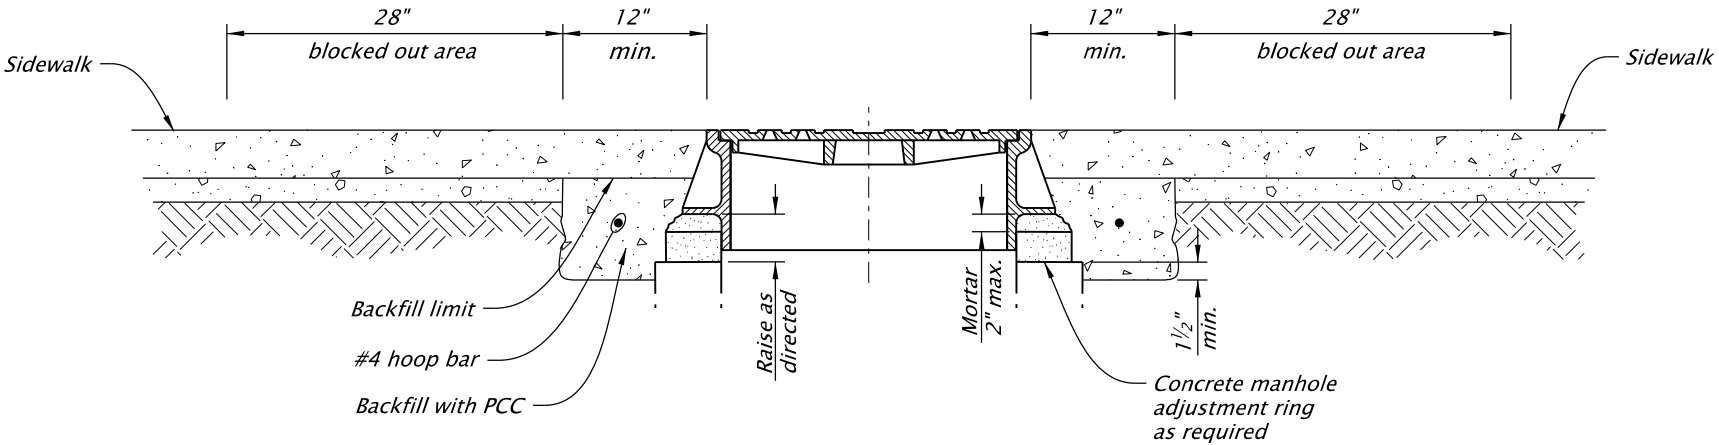

SECTION A-A

GENERAL NOTES FOR ALL DETAILS THIS SHEET:

1. Block out sidewalk area as shown.
2. Excavate around manhole 12 inches minimum from manhole frame.
3. Raise manhole frame and cover to finish grade by installing concrete rings and leveling mortar.
4. Backfill with PCC as shown.
5. Pour and finish new sidewalk in blocked out area.

The selection and use of this detail, while designed in accordance with generally accepted engineering principles and practices, is the sole responsibility of the user and should not be used without first consulting a Registered Professional Engineer.

OREGON DEPARTMENT OF TRANSPORTATION



ENGINEERING AND
TECHNICAL SERVICES BRANCH

MANHOLE ADJUSTMENT
SEQUENCE

DETAIL NO.

DET1304