
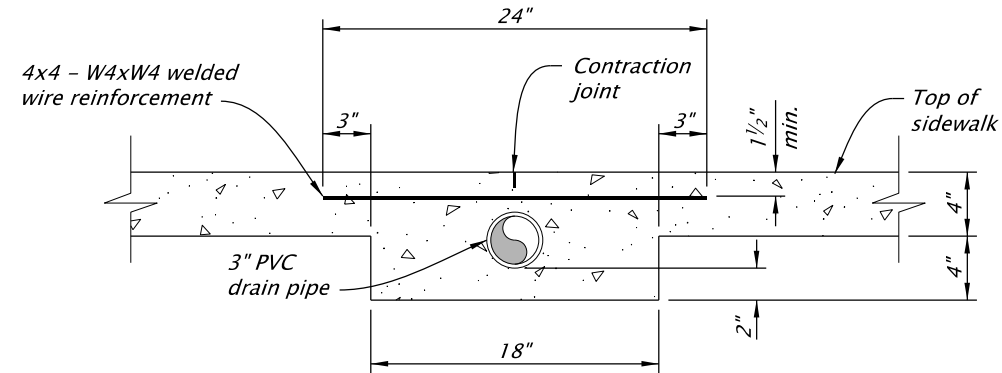
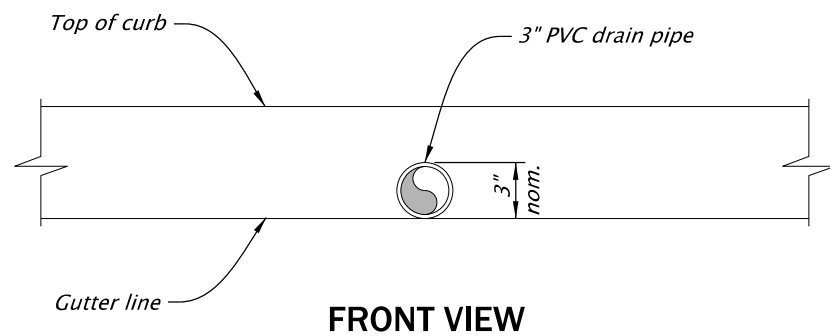


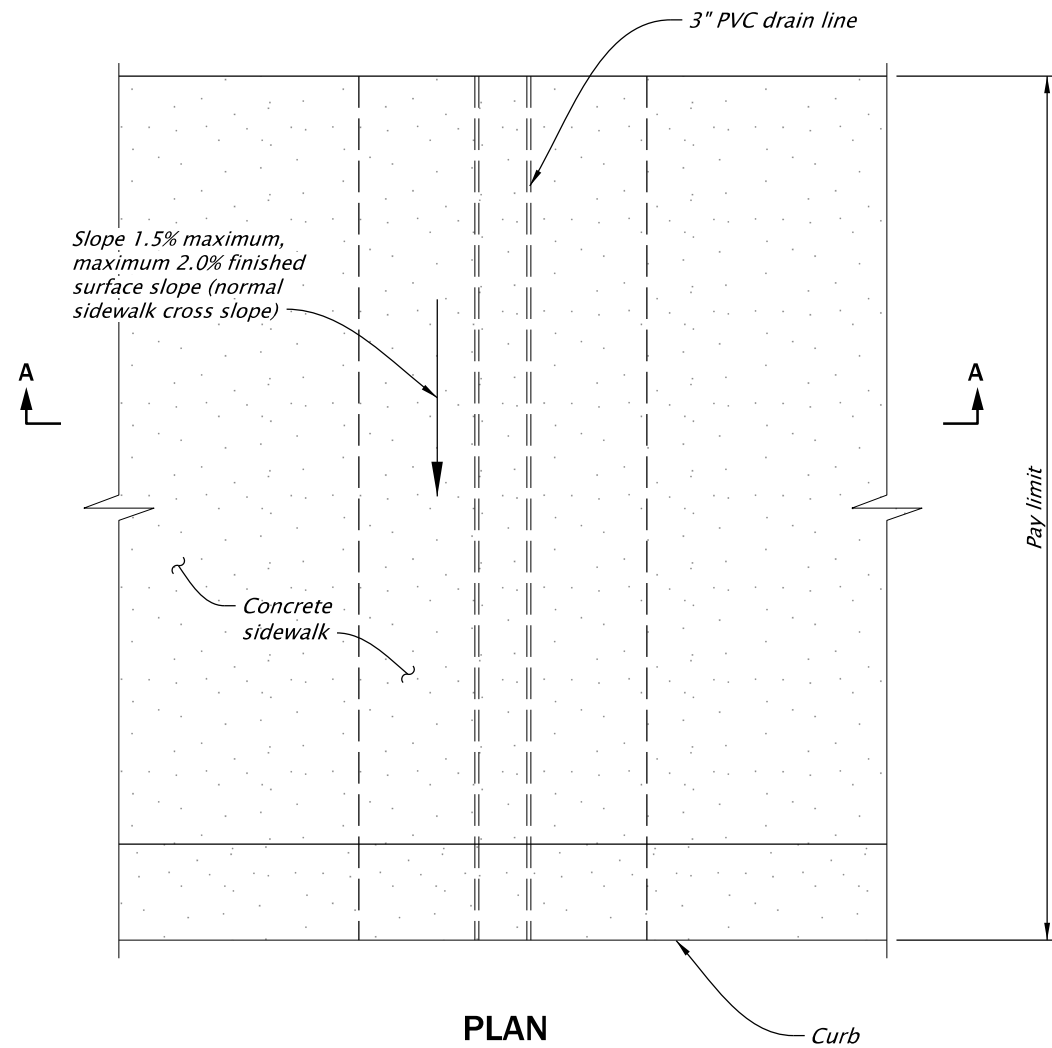

SECTION A-A

## GENERAL NOTES FOR ALL DETAILS THIS SHEET:

1. Connect drain pipe to existing building roof drain in approved manner.
2. Slope sidewalk drain pipe to drain at gutter line.
3. Use where shown on plans, and allowed by jurisdiction. Place contraction joint over top of pipe.
4. All concrete shall be commercial grade concrete.

*The selection and use of this detail, while designed in accordance with generally accepted engineering principles and practices, is the sole responsibility of the user and should not be used without first consulting a Registered Professional Engineer.*

OREGON DEPARTMENT OF TRANSPORTATION

ENGINEERING AND  
TECHNICAL SERVICES BRANCH

SIDEWALK DRAIN DETAIL

DETAIL NO.

DET1360