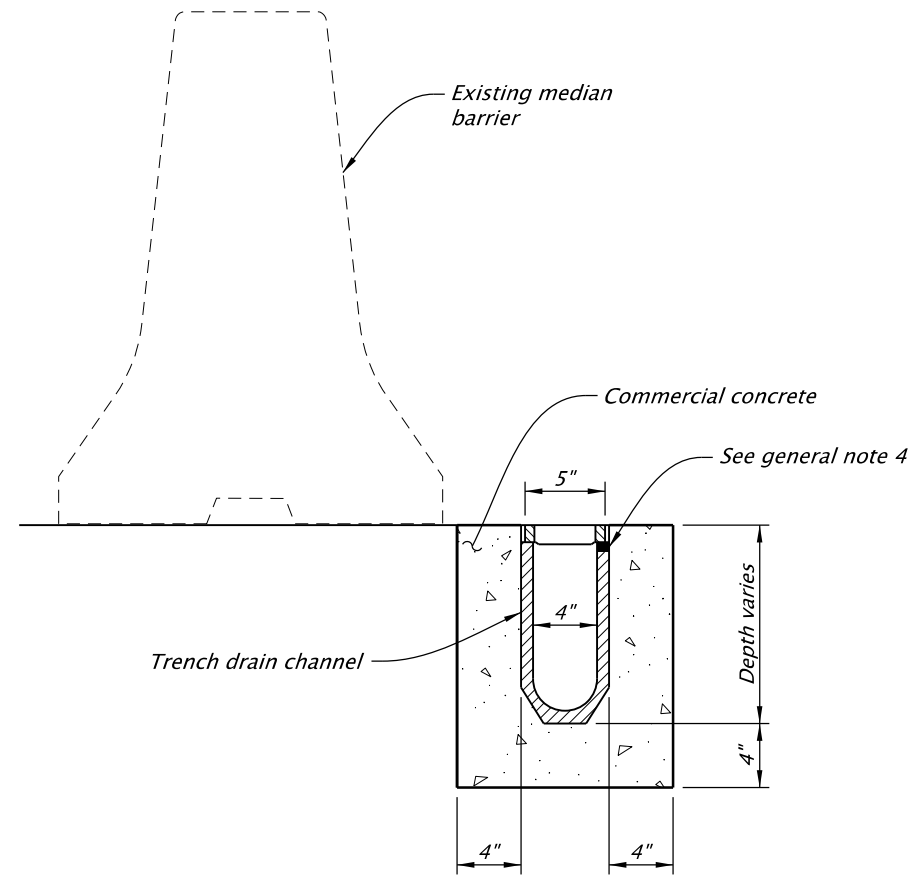
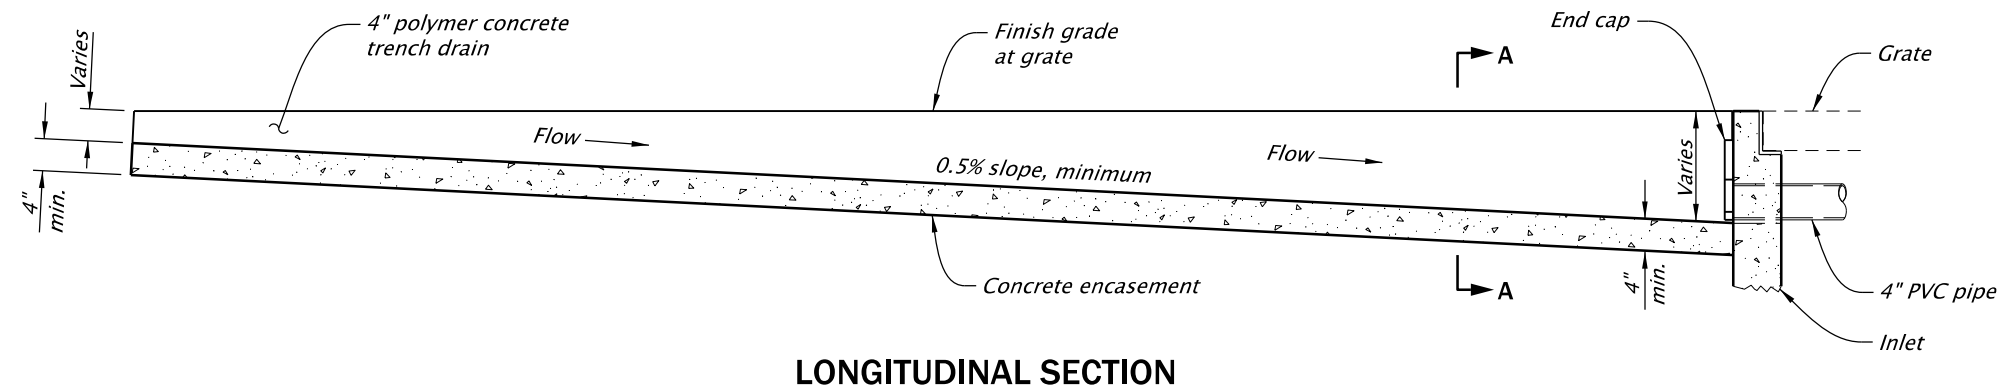


**GENERAL NOTES FOR ALL DETAILS THIS SHEET:**

1. Install removable slotted grate at the beginning of each pipe run greater than 13 feet. Install one grate every 30 feet thereafter.
2. Trench opening shall be free of any locking device.
3. Install no sooner than two weeks before placement of ACP.
4. Provide trench drain with 3/4 inch opening every 12 inches to a depth of 2 inches before final wearing course surface to allow water to pass from the open graded material into the trench drain, see Special Provisions.

The selection and use of this detail, while designed in accordance with generally accepted engineering principles and practices, is the sole responsibility of the user and should not be used without first consulting a Registered Professional Engineer.

OREGON DEPARTMENT OF TRANSPORTATION

ENGINEERING AND TECHNICAL SERVICES BRANCH

TRENCH DRAIN

DETAIL NO.

DET1375