
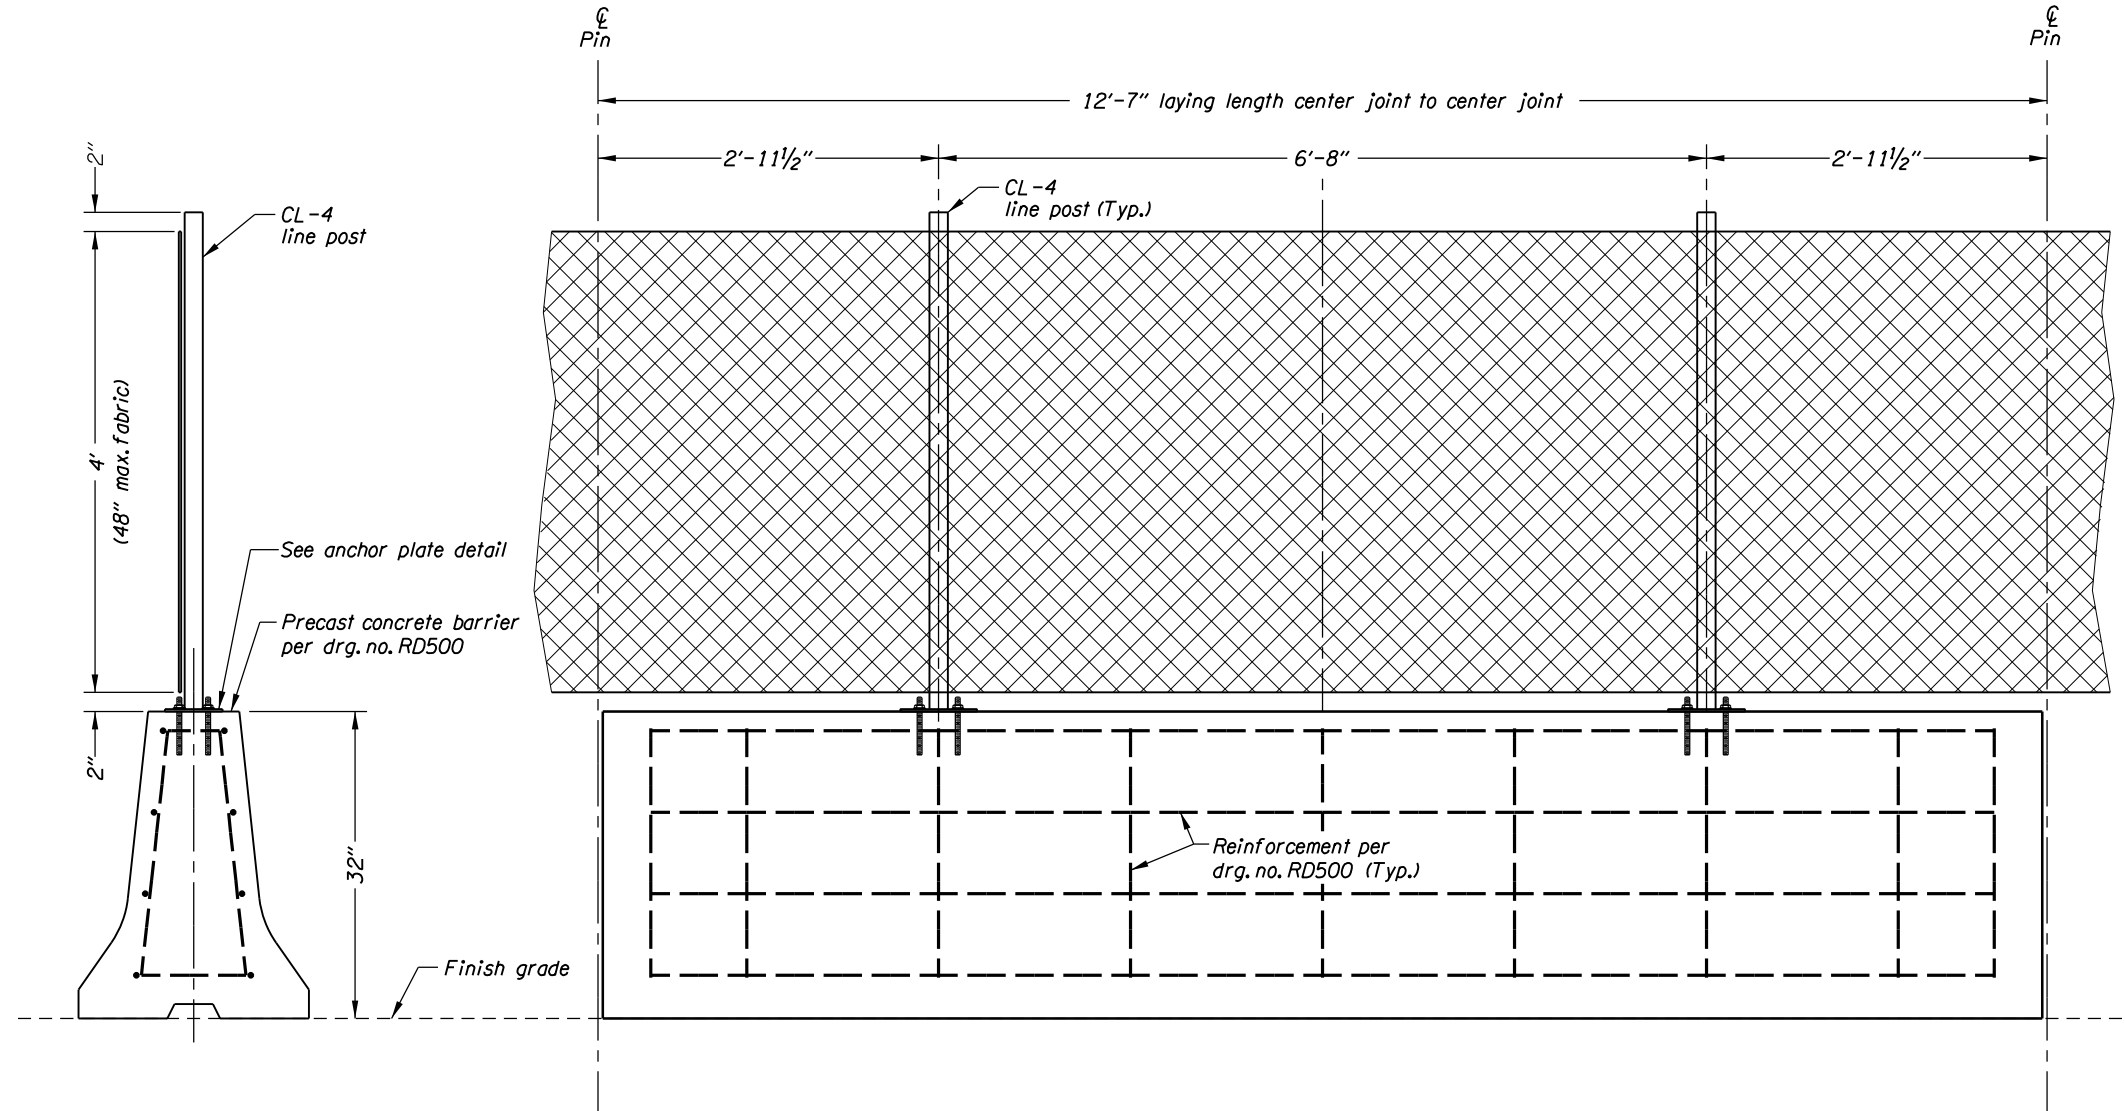
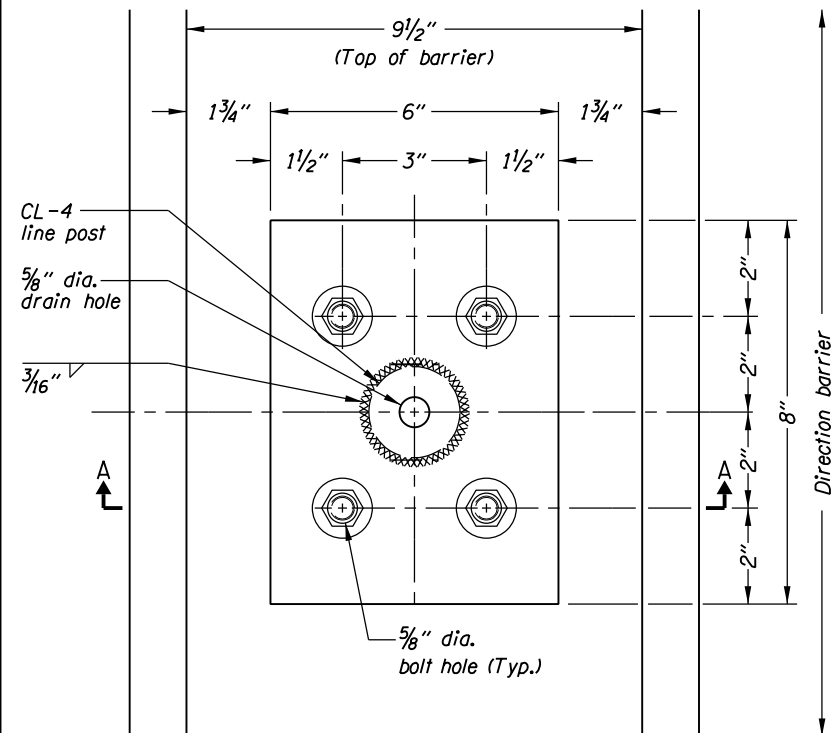


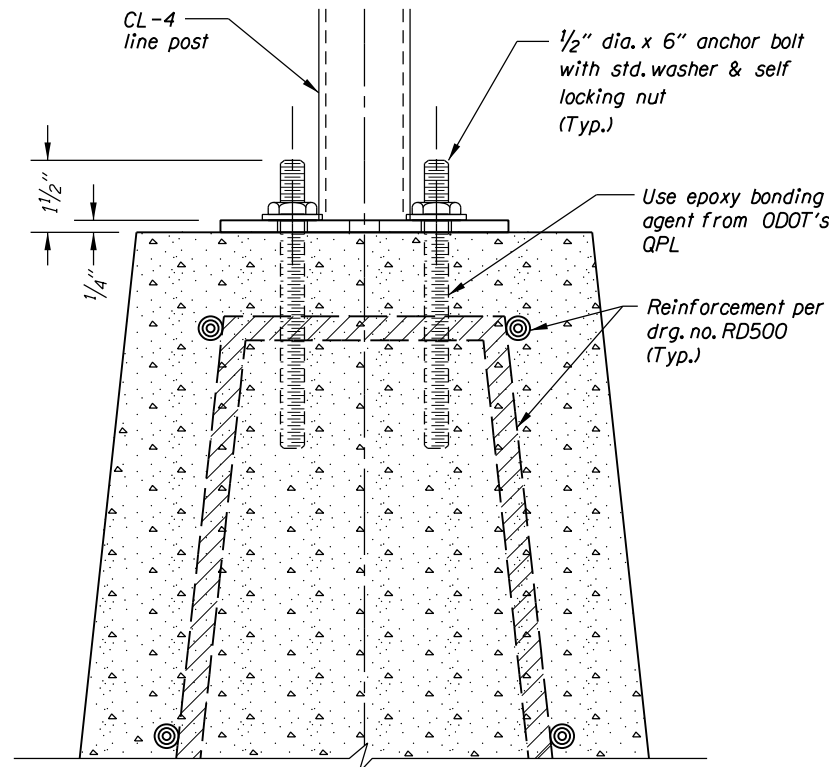

GENERAL NOTES FOR ALL DETAILS:

1. See drg. no. RD815 for chain link fence details not shown.
2. See drg. no. RD500 for precast concrete barrier details not shown.
3. Use CL-4 steel line posts per drg. no. RD815.
4. Top rail is prohibited.
5. Hot-dip galvanize all parts after fabrication.
6. Install chain link fabric on outside of curve, or as directed.
7. Install pickets, when required.

The selection and use of this detail, while designed in accordance with generally accepted engineering principles and practices, is the sole responsibility of the user and should not be used without consulting a Registered Professional Engineer.

OREGON DEPARTMENT OF TRANSPORTATION
TECHNICAL SERVICES
DETAILS

DETAILS FOR CHAIN LINK FENCE
ON CONCRETE BARRIER

DETAIL NO.
DET1830