
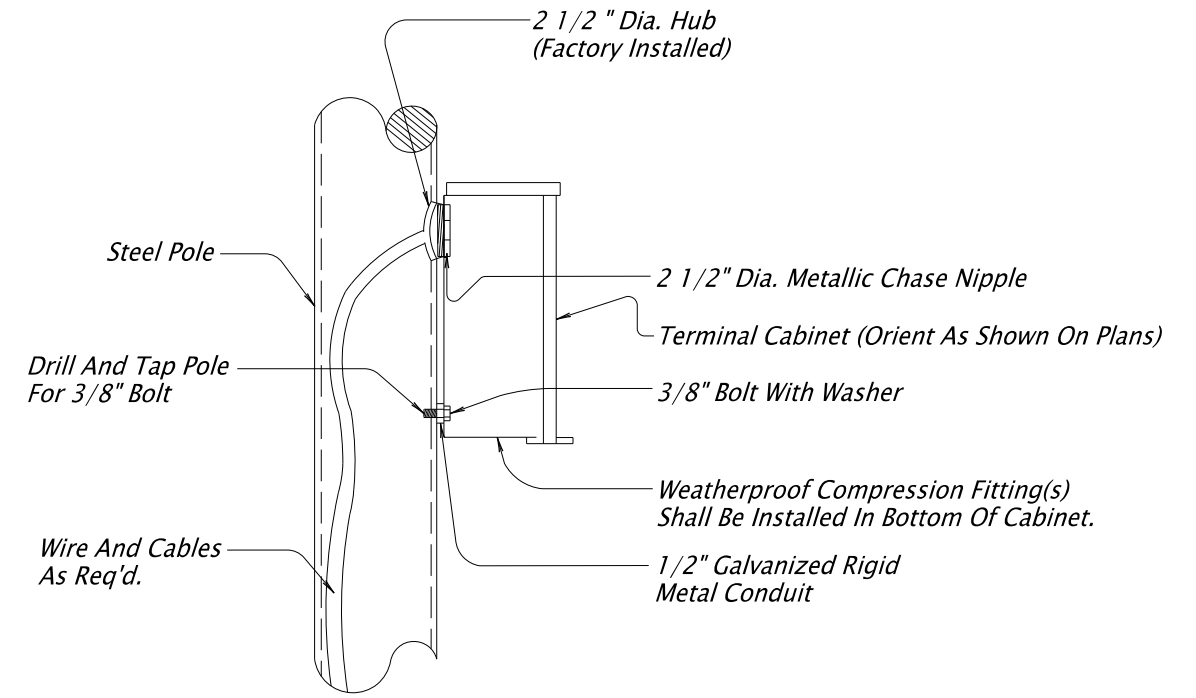
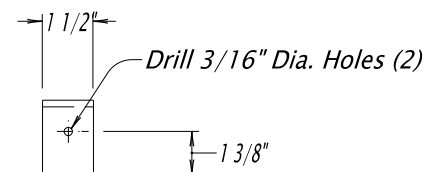
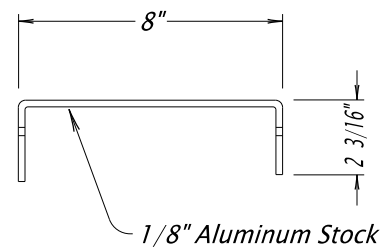
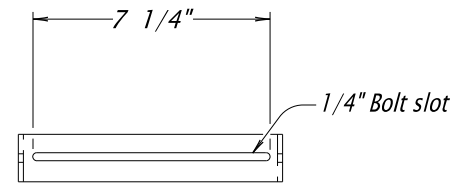


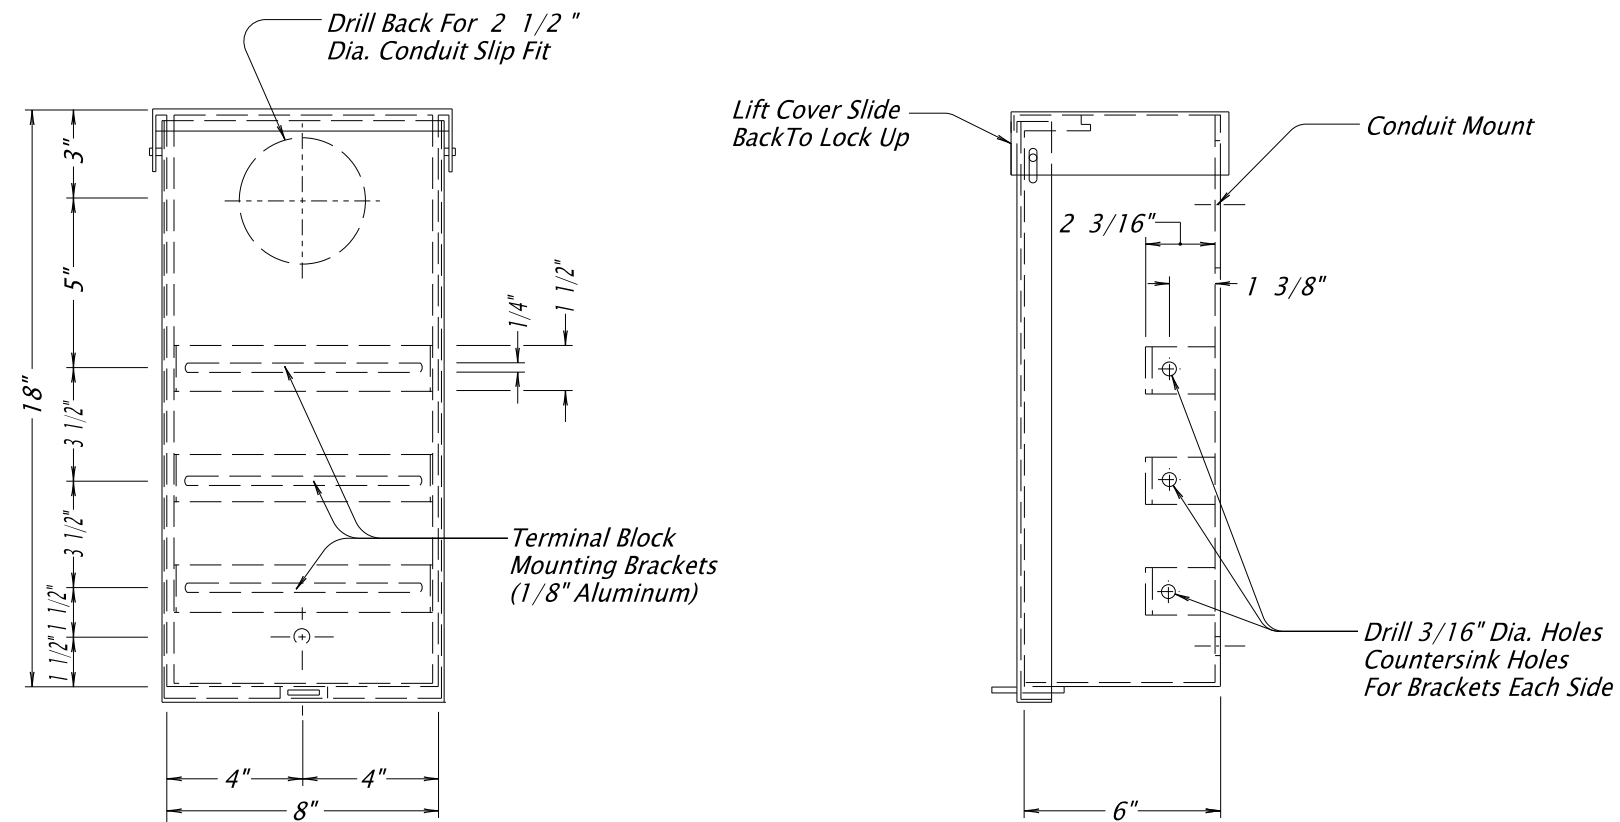

INSTALLATION DETAIL

(Terminal Cabinet)

General Notes:

1. All Screws, Bolts, Nuts And Washers Shall Be Type 304 Or 316 Stainless Steel Unless Noted Otherwise.
2. Install The Number Of Terminal Blocks Needed For The Circuits, Plus Three Spare Terminal Blocks. Evenly Distribute All The Terminal Blocks Among The Mounting Brackets.
3. Terminate Only One Wire In Each Termination Point. Use Additional Terminals With A Factory Jumper Between The Terminals If Additional Taps Are Necessary.
4. Label The Marking Strip In The Terminal Cabinet With The Wire Number And/Or Letter As Coded In The Controller Cabinet Terminal Block. Use Only Mechanically Printed Labels.

TERMINAL BLOCK MOUNTING BRACKET WEATHERPROOF TERMINAL CABINET

The selection and use of this detail, while designed in accordance with generally accepted engineering principles and practices, is the sole responsibility of the user and should not be used without first consulting a Registered Professional Engineer.

OREGON DEPARTMENT OF TRANSPORTATION



ENGINEERING AND
TECHNICAL SERVICES BRANCH

TERMINAL CABINET FOR
STEEL STRAIN POLE

DETAIL NO.

DET4419