




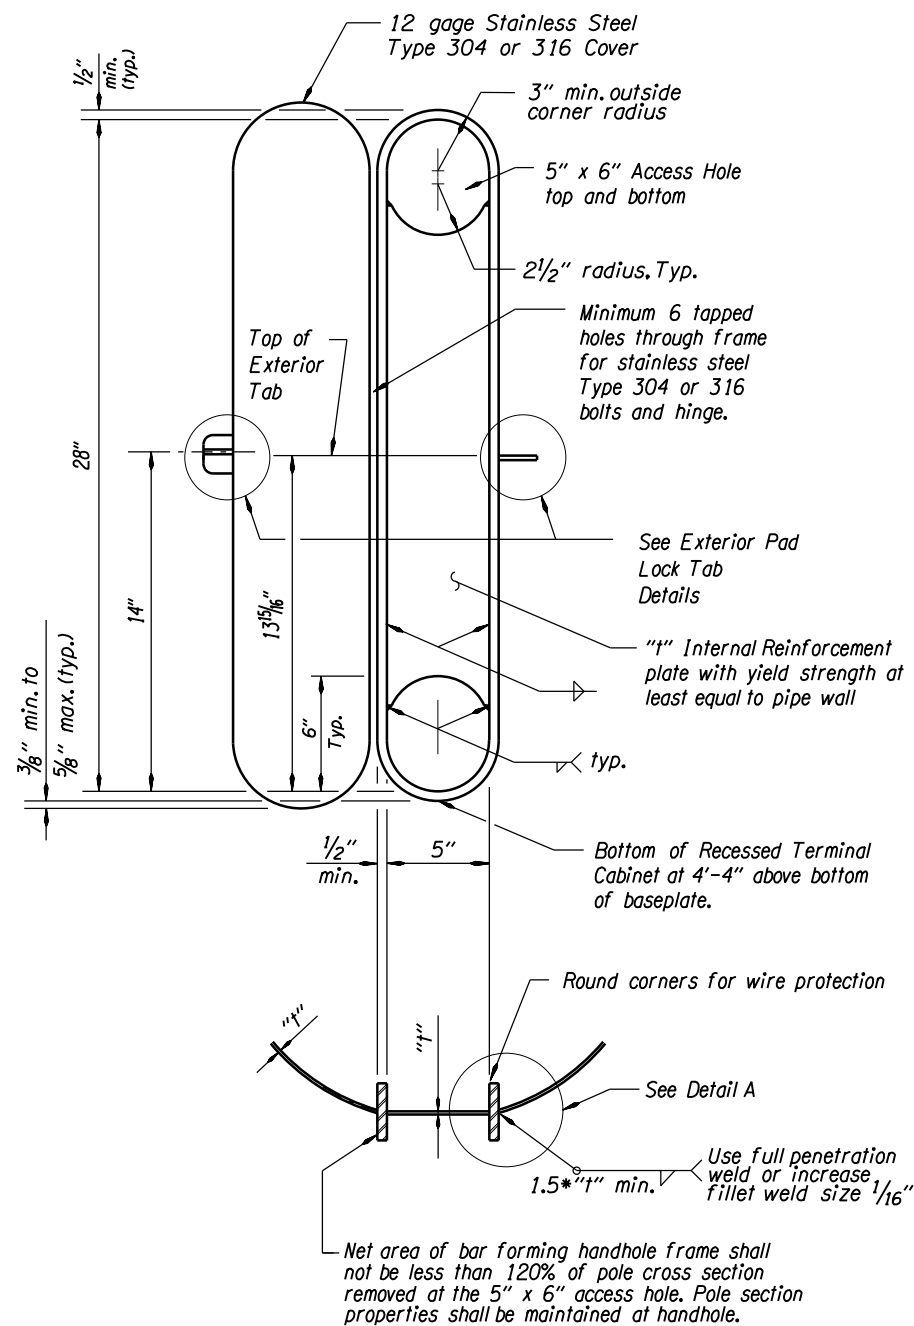


RECESSED TERMINAL CABINET DETAIL
No scale

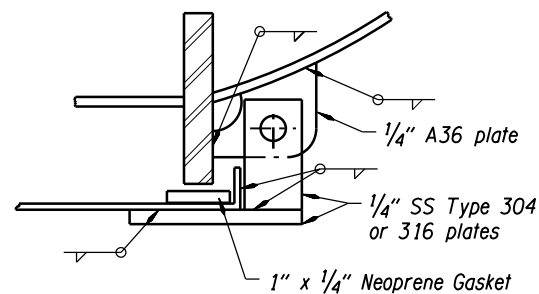


SECTION A-A
No scale

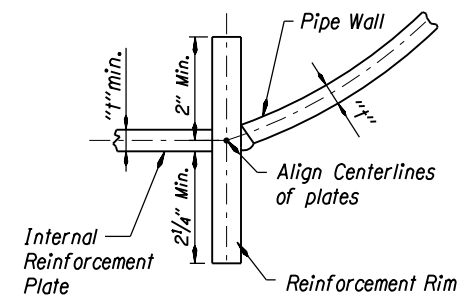


DETAIL A
No scale

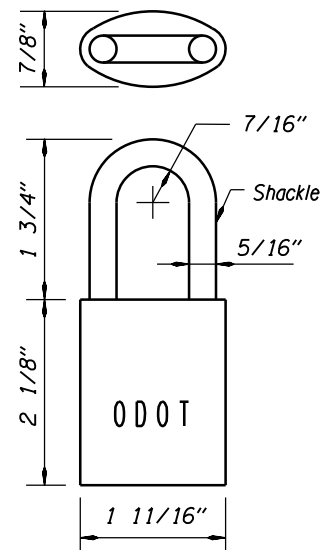

ODOT LOCK DETAILS
No scale
(ODOT Supplied Post Construction)

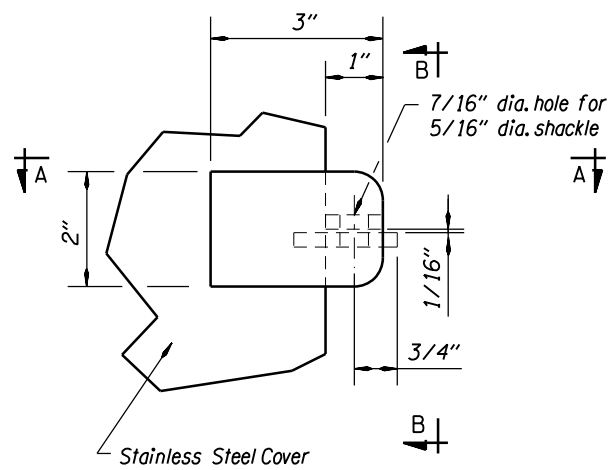

EXTERIOR PAD LOCK DETAILS
No scale

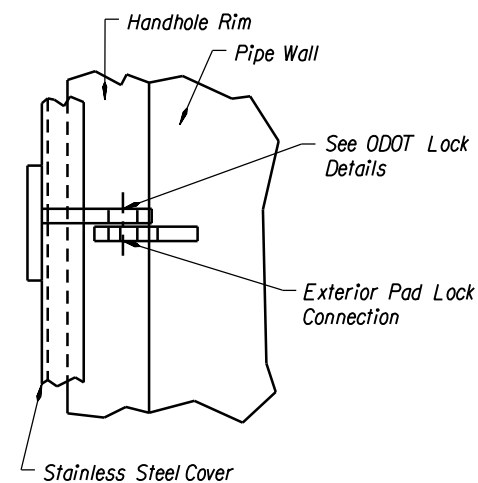

SECTION B-B
No scale

The selection and use of this detail, while designed in accordance with generally accepted engineering principles and practices, is the sole responsibility of the user and should not be used without consulting a Registered Professional Engineer.

OREGON DEPARTMENT OF TRANSPORTATION
TECHNICAL SERVICES
DETAILS

**SIGNAL POLE RECESSED
TERMINAL CABINET**

DETAIL NO.
DET4650