


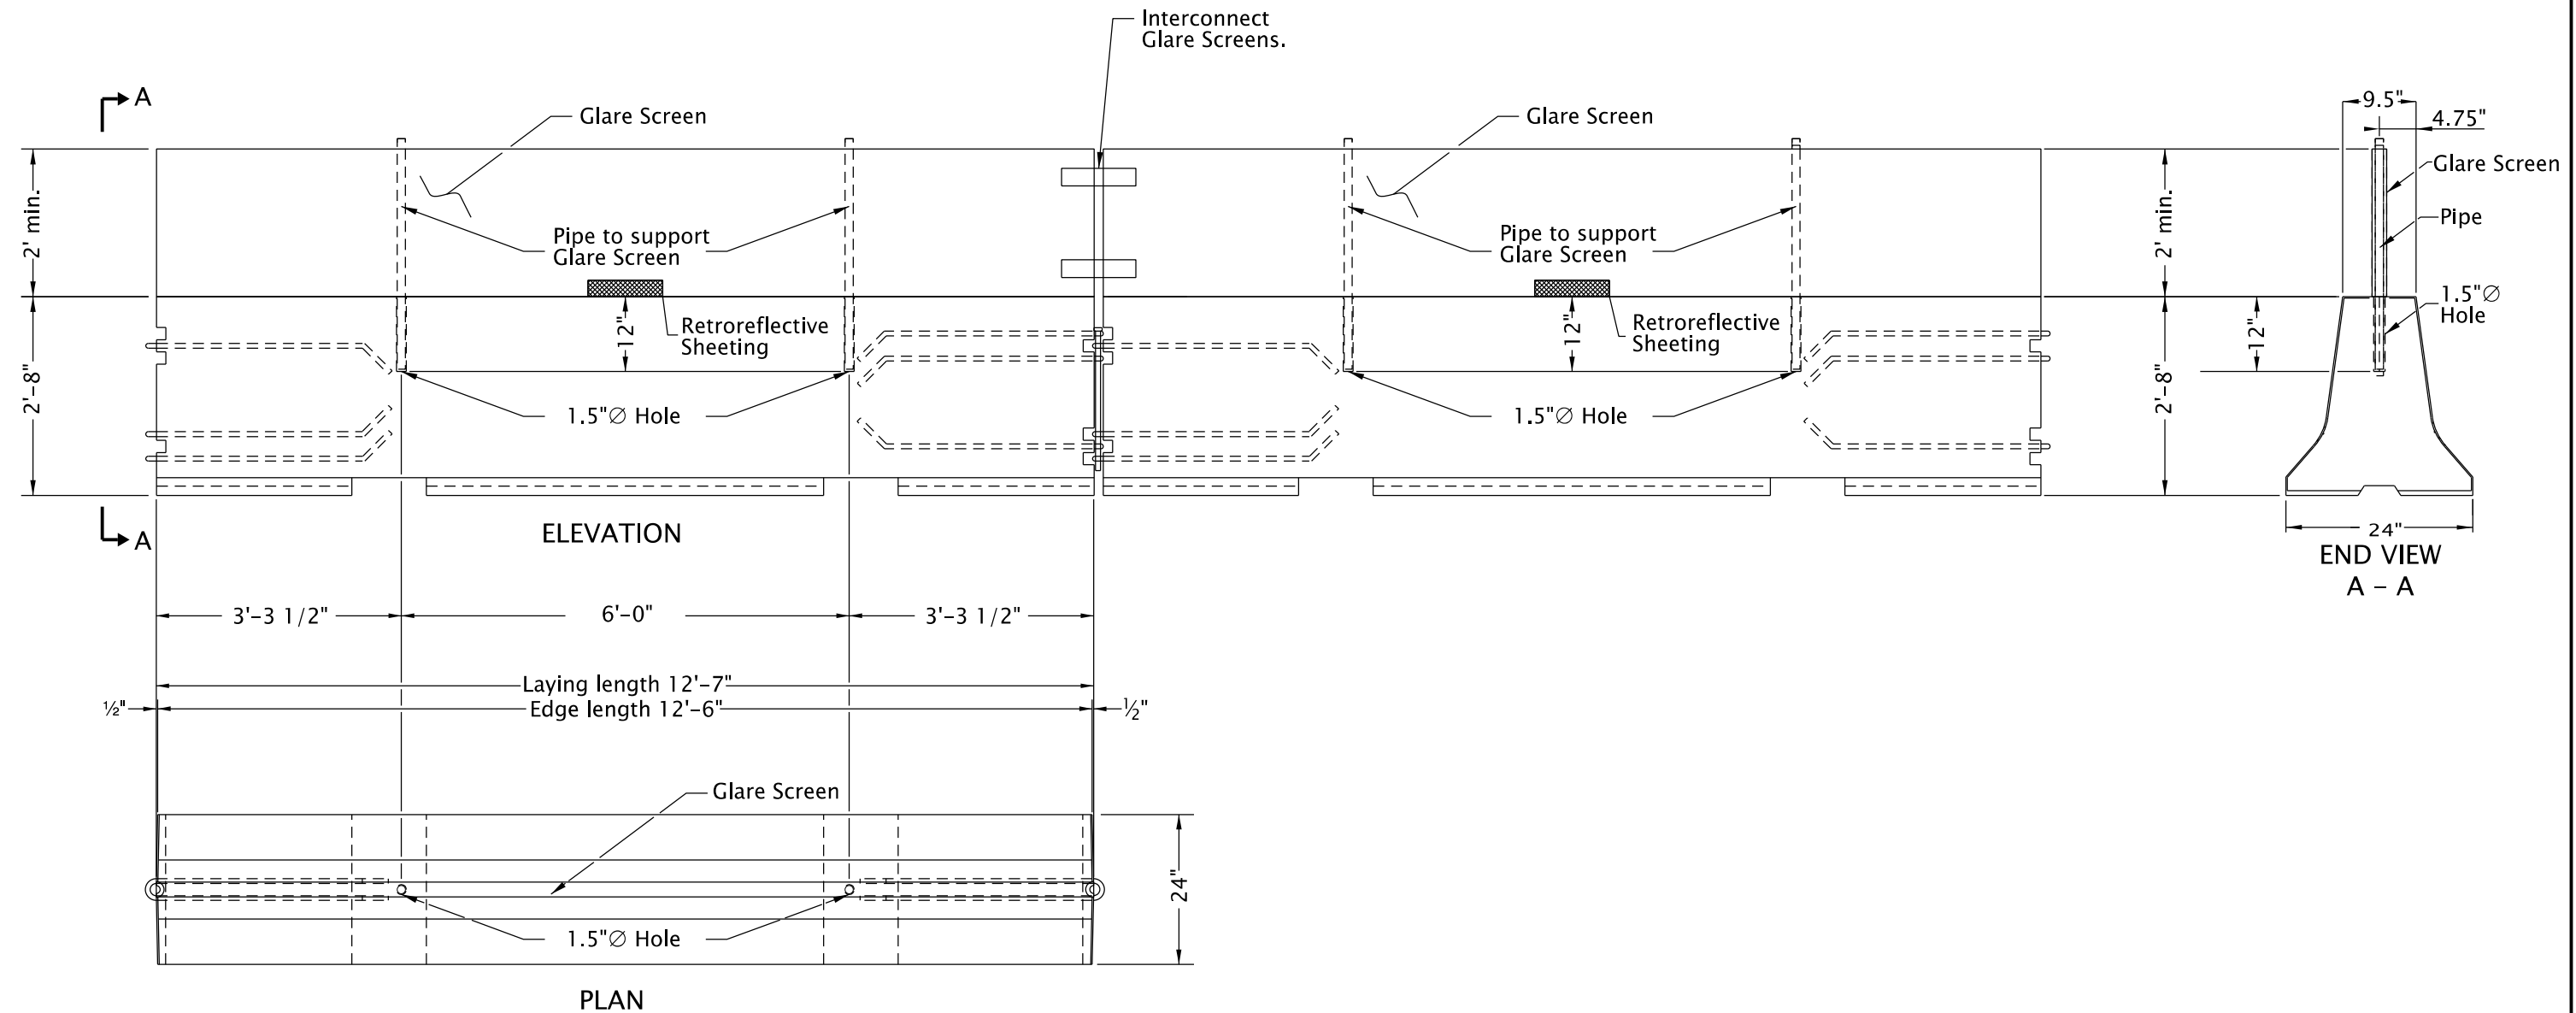

## TEMPORARY GLARE SCREEN

### GENERAL NOTES:

- Mount temporary glare screens on concrete barrier using manufacturer's QPL approved pipe placed in holes drilled in concrete barrier, or submit in writing for approval, other method of mounting.
- Interconnect all temporary glare screens
- For Concrete Barrier details, see Std. Drg. Nos. RD500. Concrete Barrier may be re-used according to Section 00820 of the Standard Specifications.
- Do not use temporary glare screens between opposing traffic lanes.
- Install 48 sq. in. white Type W1 retroreflective sheeting in the center, at the bottom on each glare screen, facing traffic.
- Maintain traffic delineators on permanent Concrete Barrier when glare screens are removed.
- Do not use temporary glare screens on permanent bridge rail or permanent bridge barrier.
- Use temporary glare screens from the QPL or Conditional Use List

*The selection and use of this detail, while designed in accordance with generally accepted engineering principles and practices, is the sole responsibility of the user and should not be used without consulting a Registered Professional Engineer.*



**OREGON DEPARTMENT OF TRANSPORTATION**  
TECHNICAL SERVICES  
DETAILS

**TEMPORARY  
GLARE SCREEN**

DETAIL NO.

DET4760