




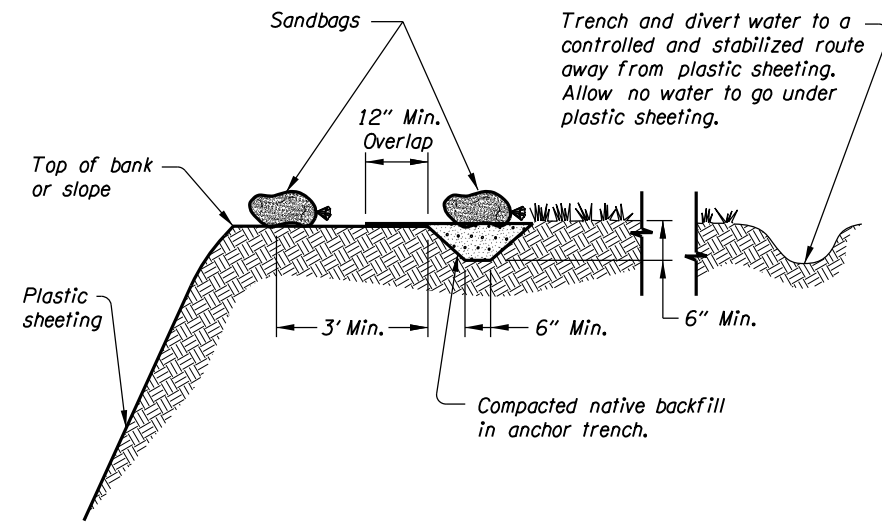

TOP OF SLOPE TIE DOWN

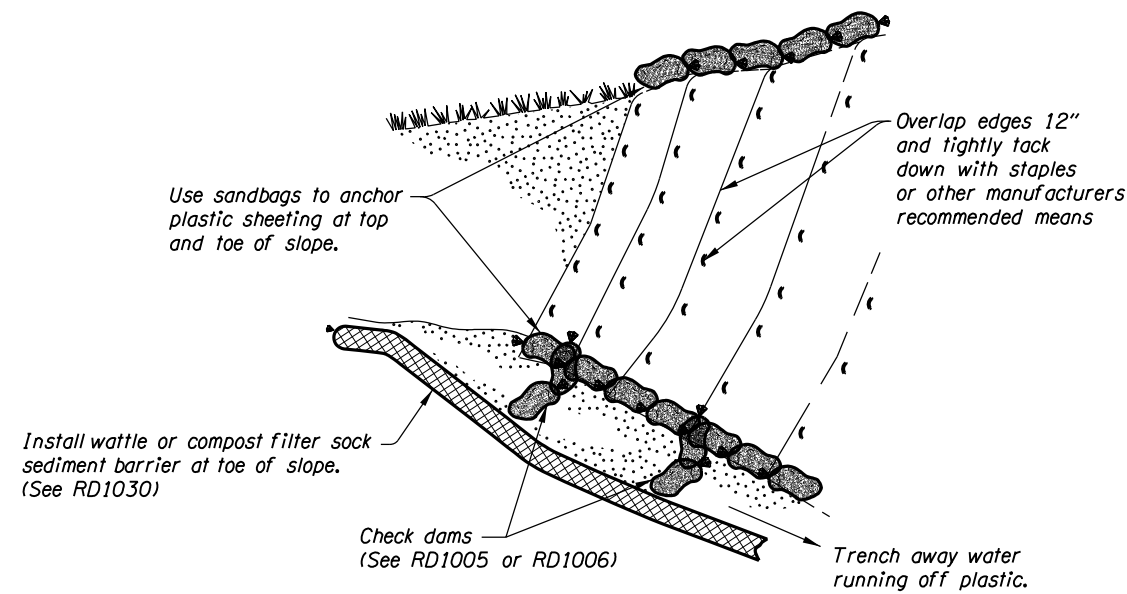


SLOPES

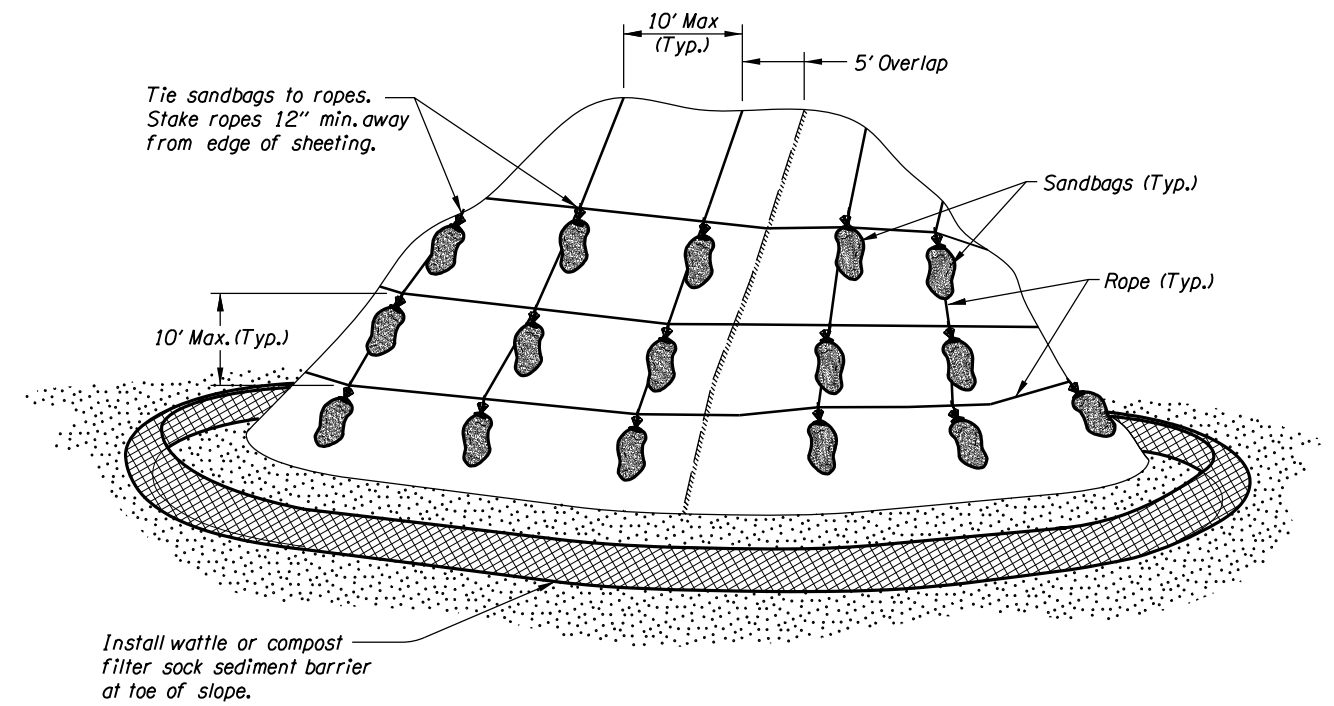

STOCKPILE

NOTES:

1. Install plastic sheeting vertically down slope.
2. Install plastic sheeting so edges overlap and are shingled away from prevailing winds.

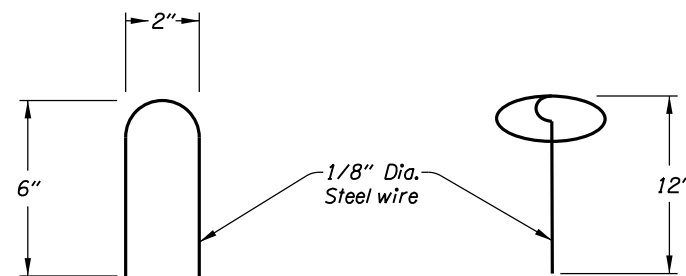

STAPLE DETAIL

PIN STAPLE

The selection and use of this detail, while designed in accordance with generally accepted engineering principles and practices, is the sole responsibility of the user and should not be used without consulting a Registered Professional Engineer.

OREGON DEPARTMENT OF TRANSPORTATION
TECHNICAL SERVICES
DETAILS

PLASTIC SHEETING

DETAIL NO.

DET6001