



det6101.dgn 8-31-2012

DET 6101


ROADSIDE DEVELOPMENT
PLANTING DETAILS

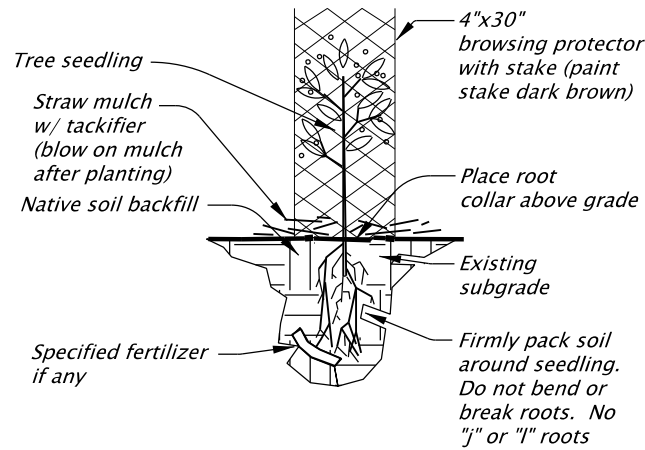

SEEDLING PLANTING

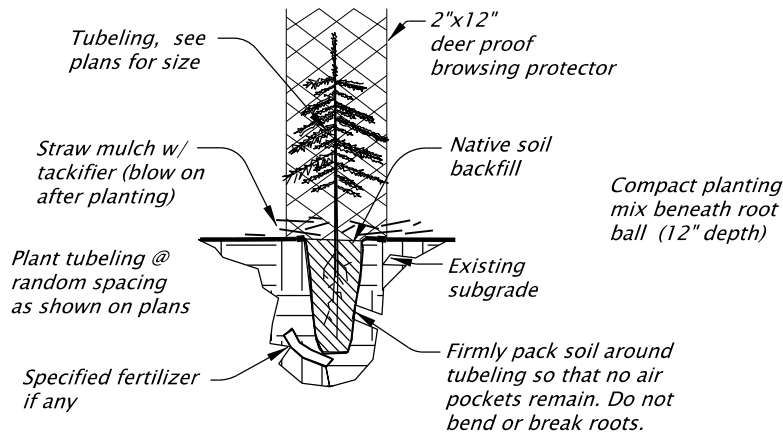

TUBELING PLANTING

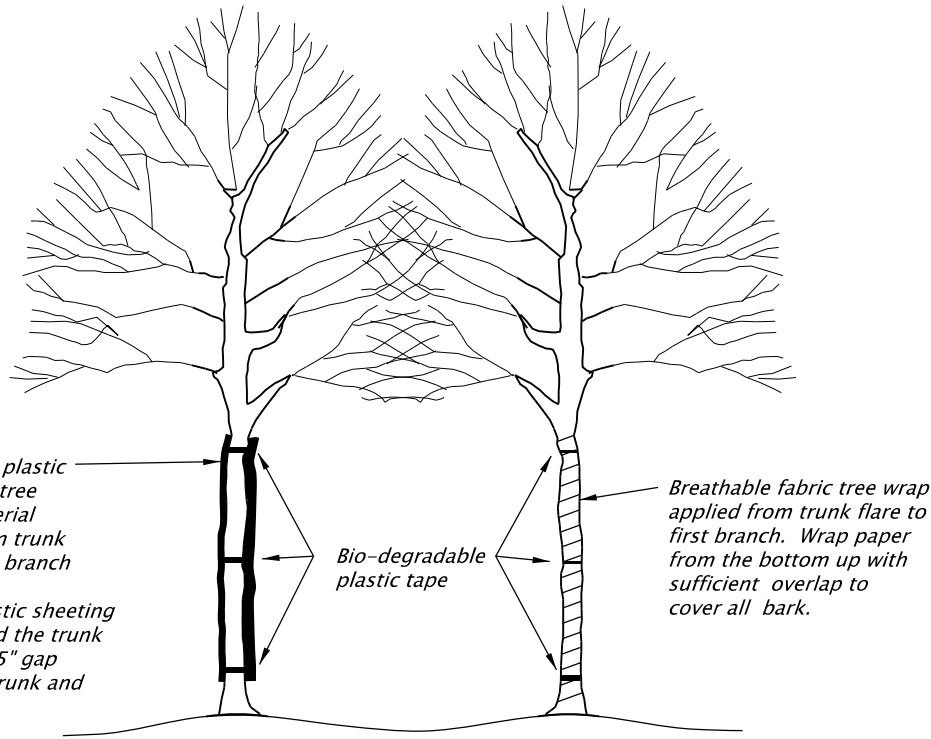


OPTION 1

OPTION 2


Tree planting notes:

Install two of the three stakes and guy wires on the uphill side of the tree.

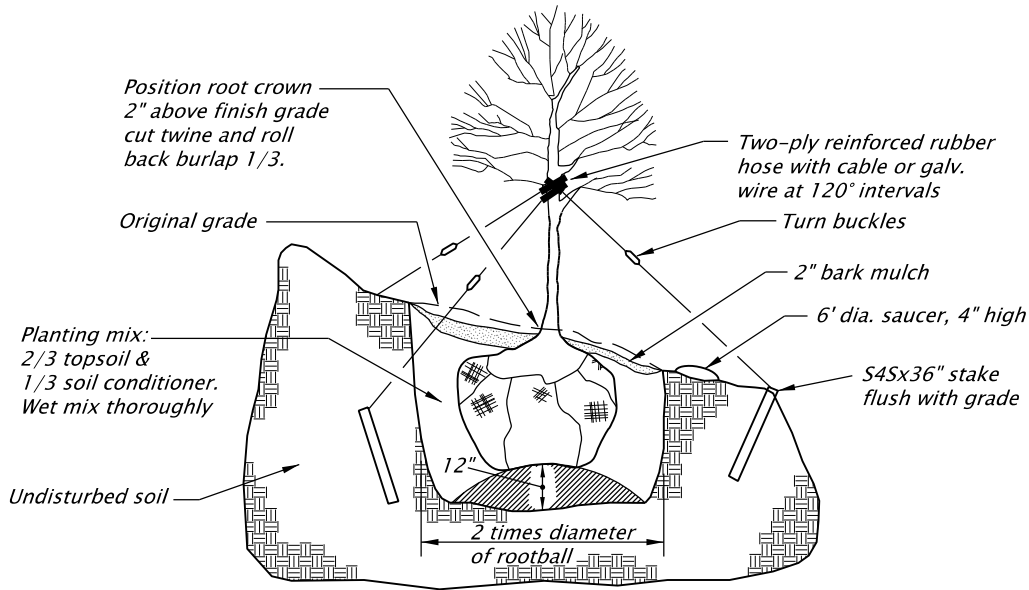

TREE PLANTING WITH GUYS ON SLOPE
(ALL FORMS EXCEPT BAREROOT)

Guying to allow 4 inch sway in all directions.
Stakes and guying to be removed after one year.

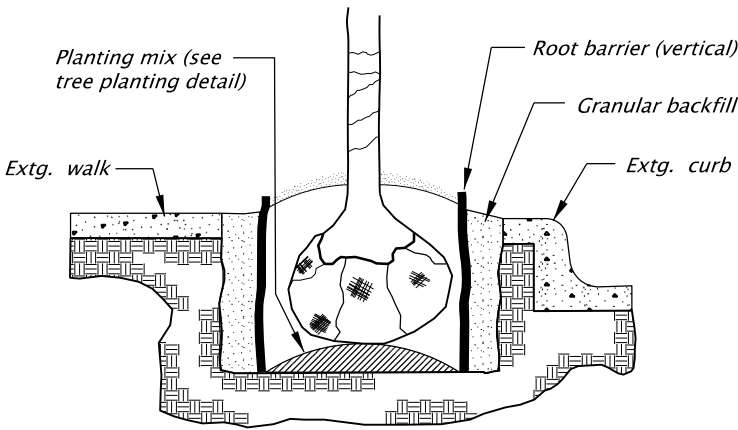

TREE ROOT BARRIER

See roadside development typical details sheet for general planting notes or tree staking notes to add when using these details

The selection and use of this detail, while designed in accordance with generally accepted engineering principles and practices, is the sole responsibility of the user and should not be used without consulting a Registered Professional Engineer.



OREGON DEPARTMENT OF TRANSPORTATION
TECHNICAL SERVICES
DETAILS

PLANTING DETAILS

DETAIL NO.

DET6101