

STATE OF OREGON  
DEPARTMENT OF GEOLOGY AND MINERAL INDUSTRIES  
800 NE OREGON ST. #28 PORTLAND, OR. 97232

**HISTORY OF OIL OR GAS WELL**  
(In compliance with rules and regulations pursuant to ORS 520)

**Operator** Nahama & Weagant Energy Co. **Lease** Columbia County **Well No.** CC 12-19-65  
**Sec 19 T 6N, R 5E, Surveyed Coordinates (if directional, BHL & SHL):**

**Wildcat:** Mist (or) **Field** **Name:** Trent R. Rosenlieb **County** Columbia  
**Signature** Trent R. Rosenlieb

**Date:** 2/18/93 **Position:** Vice President Operations 4700 Stockdale Hwy Ste 110 Bakersfield, Ca. 93309  
(Address)

Use this form in reporting the daily operations at the well. (Operator may use his own forms, but heading of this form must also be completed and submitted.) Please submit a complete history of the well. Include such information as bit sizes, mud weights, casing sizes and depths set, amount of cement used, drilling depths, fishing, logging, perforating, and plugging procedures, and anything else pertinent to the operation. Do not include lithology.

1992

12/08 Move rig. Unload tubing and BOPE.

12/09 MIRU. Unload circulating and well control equipment.

12/10 Kill well. Install BOPE. RIH with 85 jts. 2 1/16" tbg. to 2740' +/- . Secure well.

12/11 Remove BOPE. Install tree. RU lubricator and swab well. Load out circulating equipment. Secure well.

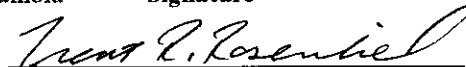
12/12 RU and swab well. Flow well. Rig down lubricator. Rig down and move off.

STATE OF OREGON  
DEPARTMENT OF GEOLOGY AND MINERAL INDUSTRIES  
800 NE OREGON ST. #28 PORTLAND, OR. 97232

**HISTORY OF OIL OR GAS WELL**  
(In compliance with rules and regulations pursuant to ORS 520)

**Operator** Nahama & Weagant Energy Co.                      **Lease** Columbia County   **Well No.** CC 12-19-65  
**Sec 19**   T 6N, R 5E,                      **Surveyed Coordinates** (if directional, BHL & SHL): 1844'S & 1210'E of NW  
corner of Section 19

**Wildcat:**                      (or) **Field Name:**Mist      **County** Columbia                      **Signature**

  
Trent R. Rosenlieb

**Date:**6/21/93      **Position:**Vice President Operations      4700 Stockdale Hwy Ste 110 Bakersfield, Ca. 93309  
(Address)

Use this form in reporting the daily operations at the well. (Operator may use his own forms, but heading of this form must also be completed and submitted.) Please submit a complete history of the well. Include such information as bit sizes, mud weights, casing sizes and depths set, amount of cement used, drilling depths, fishing, logging, perforating, and plugging procedures, and anything else pertinent to the operation. Do not include lithology.

1993

- 06/17                      Open well. Install BOPE. RU loggers. Run Neutron-CBL-CCL from 2942'-1900'. Rig down loggers. SI well.
- 06/18                      Open well. Lay down tbg. Remove BOPE. Install tree.
- 06/19                      RU swab to initiate flow. Flow well for cleanup. POP.

