

## Workflow to Assemble a Miscellaneous Detail Sheet using MicroStation CONNECT

The steps outlined below will cover the main steps to use MicroStation CONNECT in a CONNECT Design Platform project in ProjectWise, to assemble a sheet containing miscellaneous detail drawings in a Detail Sheets document.

### Prepare the CAD Base File

The CAD Base file in the 3\_Base\_files folder has a design-type model named Details. The Details contains the detail drawings necessary for detail sheet creation.

### Create the Detail Sheet File and the Named Boundaries Model

Use **Document>New>Advanced Wizard...** in ProjectWise and select *Seed2D.dgn* from the CAD\_Resources\Seed folder as the template. On the Document Naming Tool page of the wizard, add the extension .dgn to the Document Name field before clicking [**Next >**].

Advanced Document Creation Wizard

**Define Document Attributes**  
You should define environment specific document attributes.  
Modified attributes may apply to remaining documents.

**Document Naming Tool**

Project ID: K99999

Classification: Roadway | Discipline: Roadway | SubDiscipline: Roadway

Document Description(\*): <Sheet-No> - Detail Sheets

Document Name(\*): R\_K99999\_dt\_03.dgn

Correct ProjectWise Folder: 2\_Plan\_Sheets

Error Message: Incorrect Document Name: edited searchable key words. Please undo.


Structure Name: | Structure #: | DFI #: |

**Tips**


1. Edit description: <here and delete chevrons>, #, \$, ? and add to the beginning or end.
2. Edit name: date, sequence number, ?, #, add zDeleted to the beginning (as needed).
3. Edit Digital Plan descriptions and names: "?" with a letter (a-z or A-Z); replace "#" with a digit (0-9).
4. Do not delete searchable key words.
5. Select the correct folder using the Advanced Wizard/Select Target Folder page; otherwise, cancel and name the document in the correct folder.
6. Click into the Error Message field and confirm it's blank (no errors).
7. Consultants Only: Copy/paste the name and description to the Advanced Wizard/Document Properties page or the General tab using the "Properties..." shortcut.
8. Send document suggestions to PWNamingCommittee@odot.state.or.us

< Back | Next > | Cancel

In ProjectWise, right-click on the file and select "Open With..." from the pop up menu. On the **Open document with** dialog, select MicroStation CONNECT Edition, then click [**OK**].

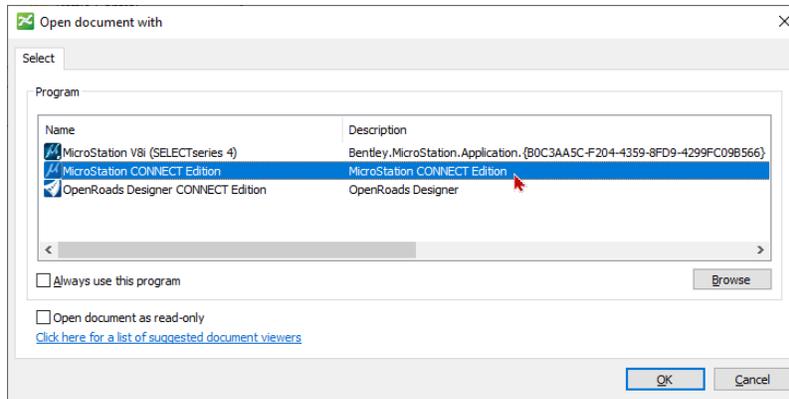


In MicroStation CONNECT, open the **Models** dialog and click the **Create Model** icon. Choose a Type of “Design From Seed”, which should automatically use the Default model of Seed2D.dgn. Name this model Named Boundaries.

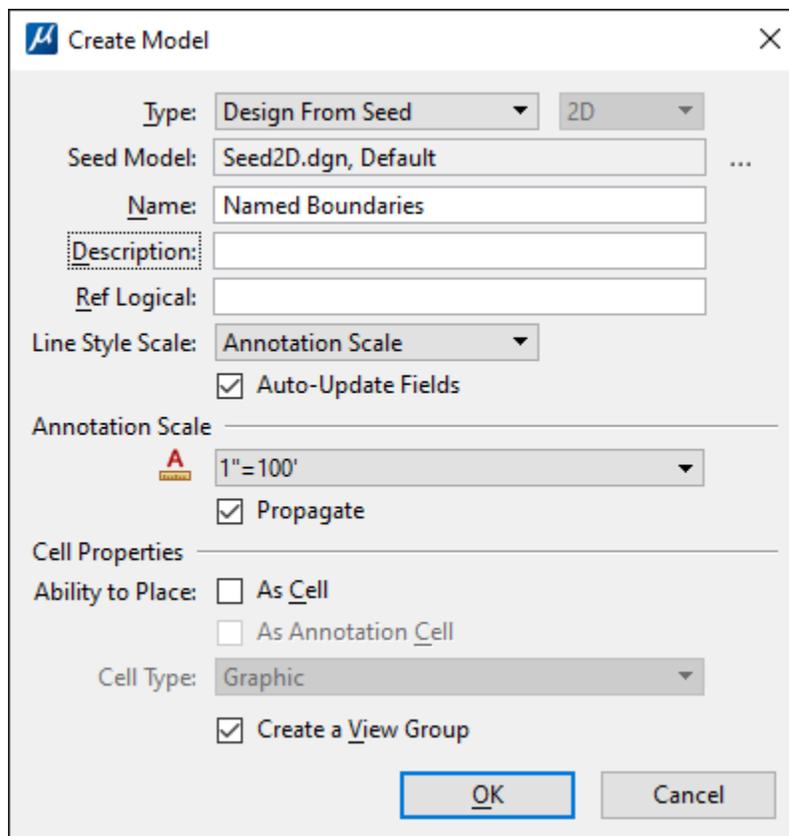


### Prepare the Named Boundaries Model

In the Named Boundaries model, attach a reference to the Details model of the CAD Base file and zoom in to the graphics. Place a *borderfull* cell (anchor it near one detail) and change the Annotation Scale until the graphics fill up the intended area on the sheet. Save the design file settings.


Clip shape cells can be found in the **ODOT Plan Sheet Creation** ribbon workflow and the Sheet Borders group.

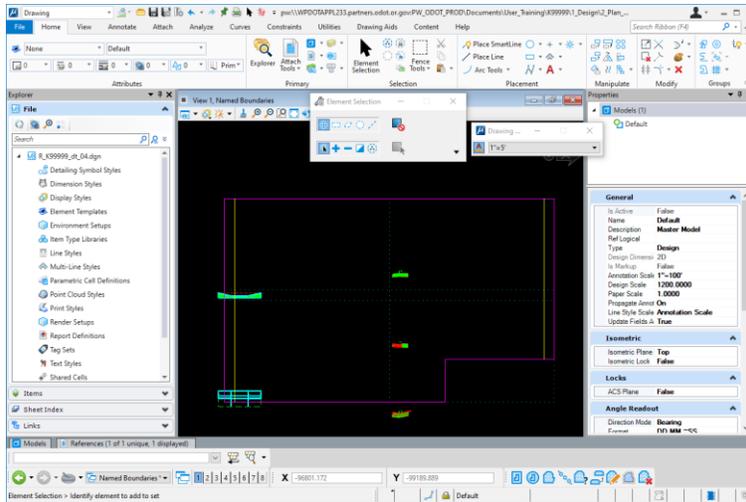

Too Big at 1"=5'

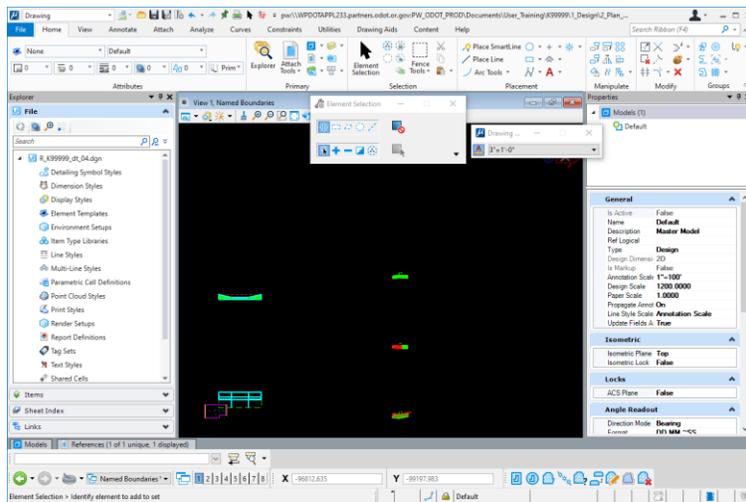

Too Small at 3"=1'-0"

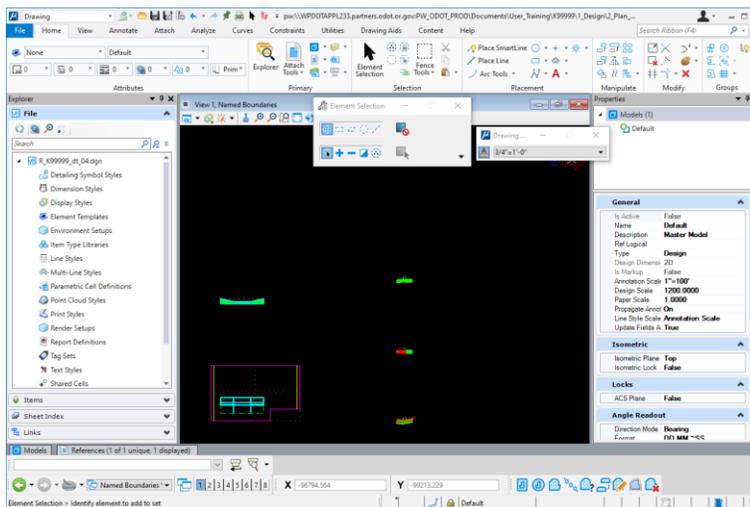


Just Right at 3/4"=1'-0"




**Tip!** How does Annotation Scale work? The scale factor is unit-less - use CUSTOM to see the scale factor. As the scale factor increases - so does the size of the borderfull cell and the area or coverage increases. Consider the increasing scale factor like an increase in altitude - the bird's eye view covers a larger area. But as you fly higher, the things inside that area appear smaller!

## Place the Named Boundaries

Adjust the *borderfull* cell position so that one detail is correctly located inside the cell. This cell will be used for creating the sheet. Set the active level to S\_NamedBoundary. Using the View tab of the Drawing ribbon workflow, select “Place Named Boundary” and choose the method of “By 2 Points” from the icons on the top row. Set the tool settings of the Place Named Boundary command as shown on the picture below.

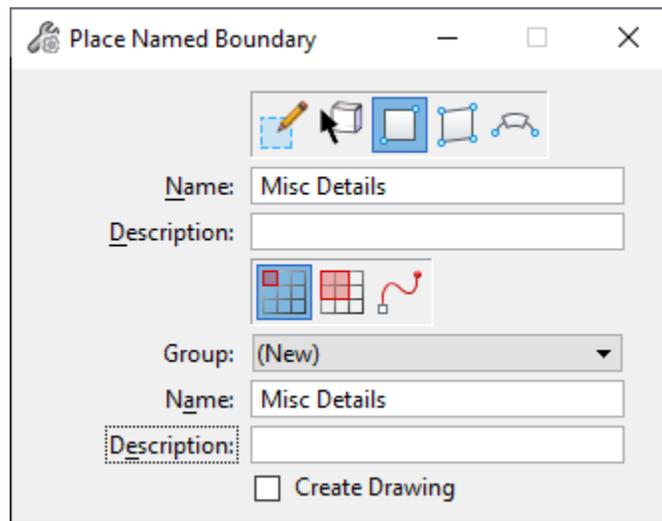

The top **Name:** field will become the name of the named boundary. The lower **Name:** field will become the name of the group that is created to hold the named boundaries. Leave “Create Drawing” unchecked. Let AccuSnap draw your mouse cursor in to select the diagonal corners of the *borderfull* cell; then accept the points with another left click.


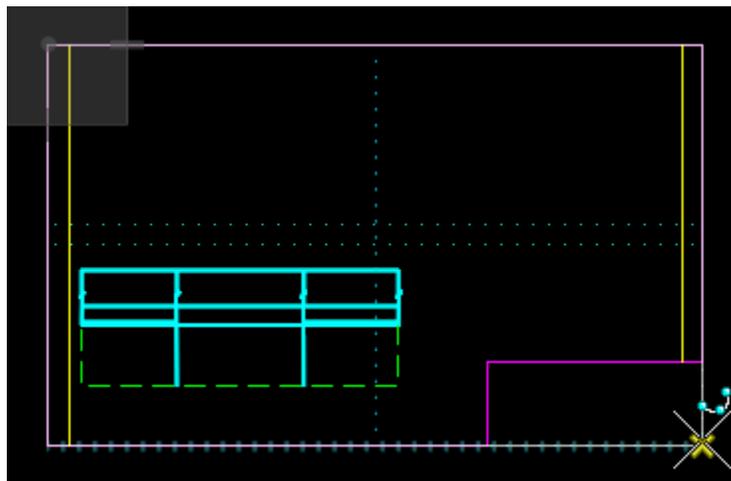




**Tip!** For plan sheets created along a path, it is good to use the Plan View Sheet drawing boundary seed. The Plan View Sheet drawing boundary seed forces the creation of a drawing-type model when the sheet model is created. Each plan sheet model will have a drawing-type model with a similar name, for annotating that specific sheet.


For detail sheets, you will create fewer models and no drawing-type models at all, when you do not use a drawing boundary seed. If it is your goal to not create drawing models (maybe you don't intend to ever use a drawing-type model) - then you can use the “By 2 Points” method of placing named boundaries and snap to the corners of a borderfull cell at least for the first drawing boundary that is used to create the sheet.

Use the “Place Named Boundary” command four more times – each time setting the Name to the name of detail drawing and the Group to the previously created group Misc Details.

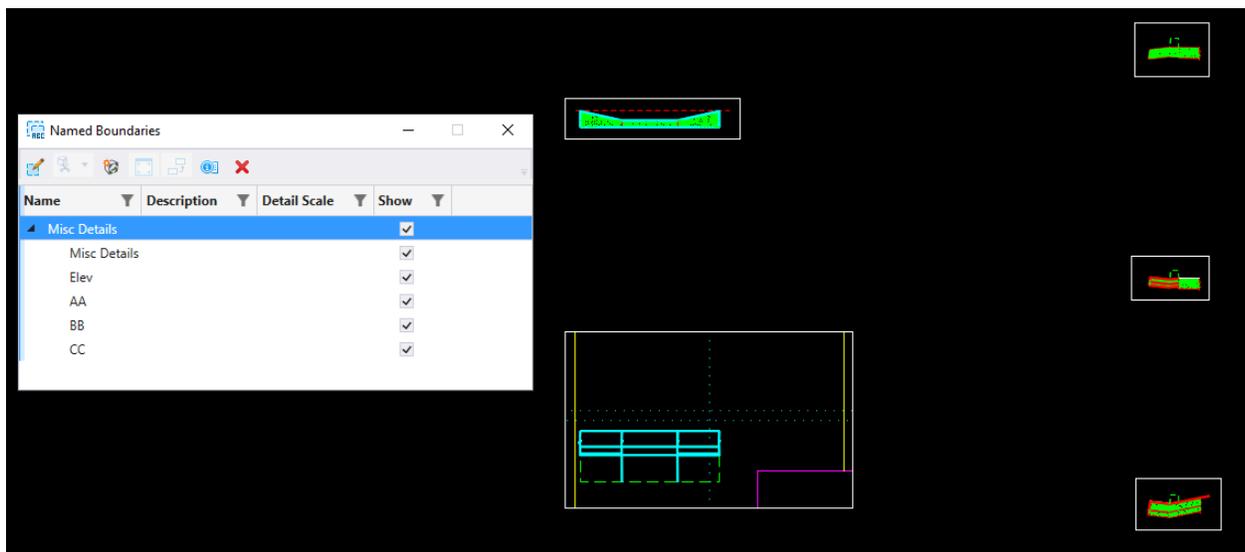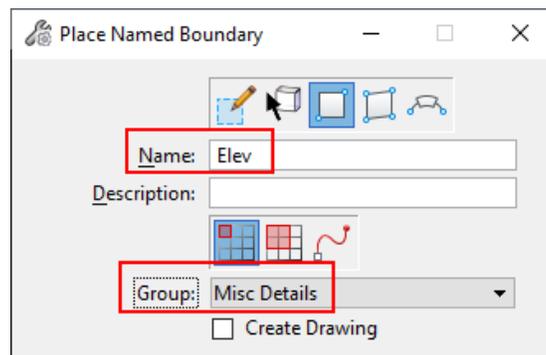


## Cut the Sheets

Launch the **Named Boundaries** dialog from the small icon in the lower right corner of the Named Boundaries group. Select the first named boundary, Misc Details, right-click and choose “Create Drawing” to open the Create Drawing dialog.

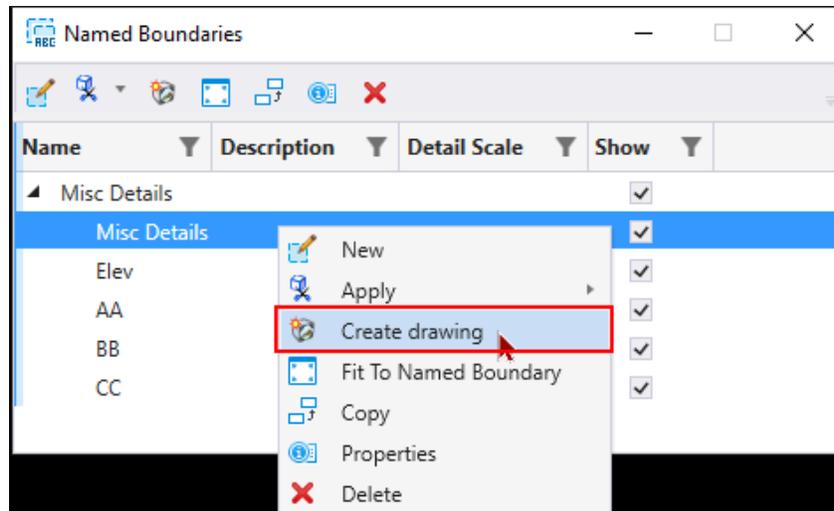


On the Create Drawing dialog, check the box next to “Create Sheet Model” and set the Detail Scale to be the same as the Annotation Scale of the Named Boundaries model.

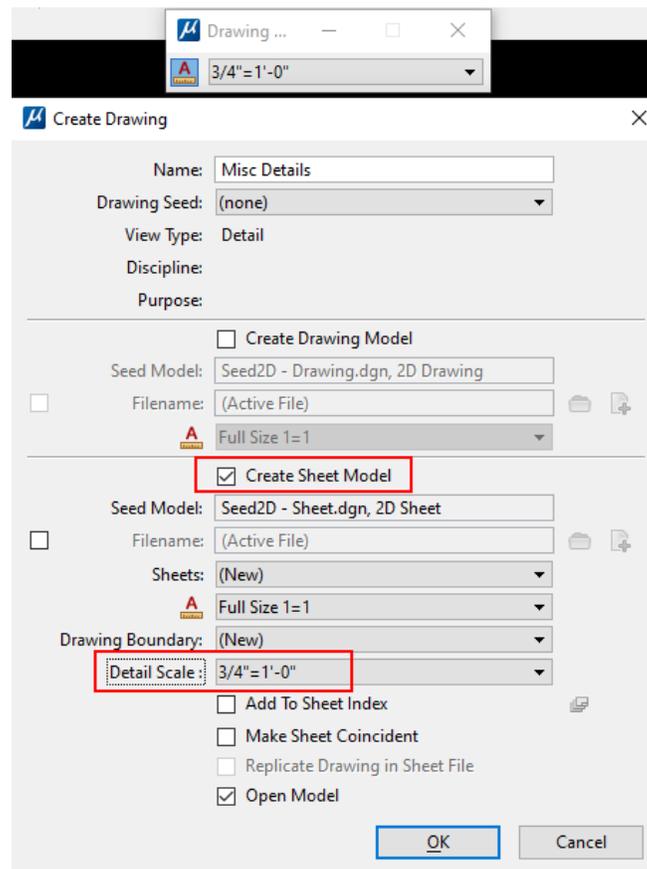

**Tip!** When the named boundary is the same size as the view port in the sheet - the Detail Scale ends up being exactly the Annotation Scale (Drawing Scale or Print Scale). When the named boundary is smaller than the view port of the sheet - you need to check the Detail Scale and reset it to the chosen Drawing Scale. Setting the intended print scale in the Named Boundaries model makes all choices downstream a bit easier.

With “Open Model” checked on – clicking [OK] will create the sheet model in the Detail Sheets file. The picture below shows the sheet, the reference to the first detail drawing, the border, the title block, and drawing aids that are available.

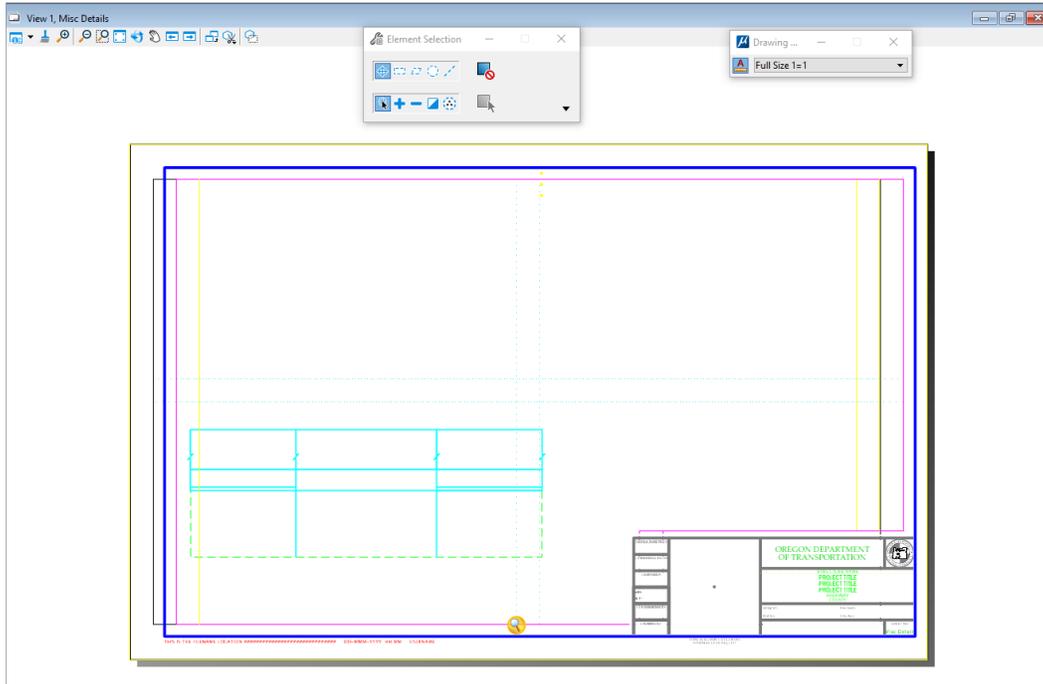


The named boundary is centered on the sheet and not correctly positioned within the border. Use the snapping points available from the *borderfull* cell to move the reference into its correct position in the sheet.

The Detail Callout and construction class elements may be toggled off in the View Attributes. Level Display may also be used to adjust the view.


### Adding the Other Detail Named Boundaries

The named boundaries are stored in the “Named Boundaries” model, so that model must be the active model in order to proceed.


Using the **Named Boundaries** dialog, right-click on another named boundary for a detail that should appear in the same sheet and choose “Create Drawing”.

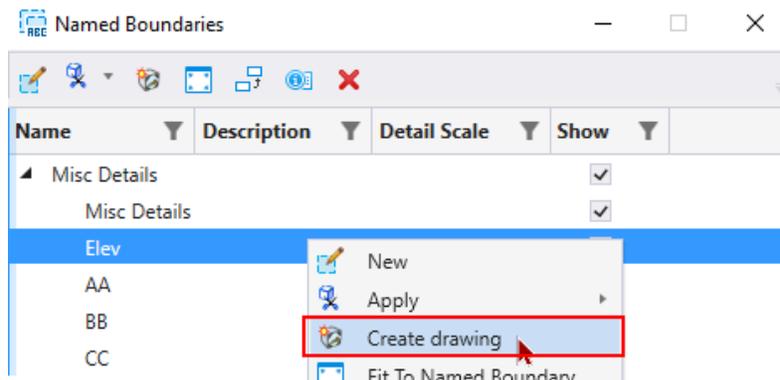


Ensure that “Create Sheet Model” is selected, that the Sheets: field shows the name of the sheet model that was previously created, and set the Detail Scale: to match the Drawing Scale.

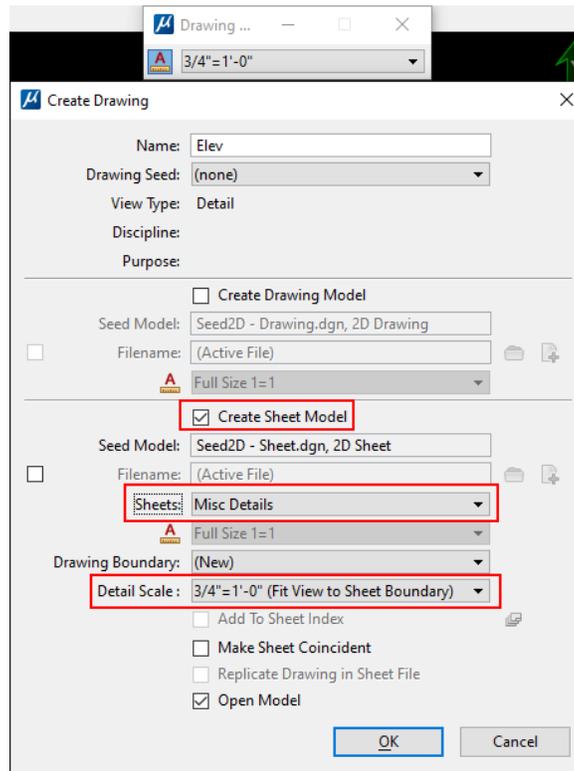

The named boundary will be attached and clipped in the sheet, and will need to be moved from its initial center location to the correct position in the sheet. AccuDraw can be used to align the references in the sheet.

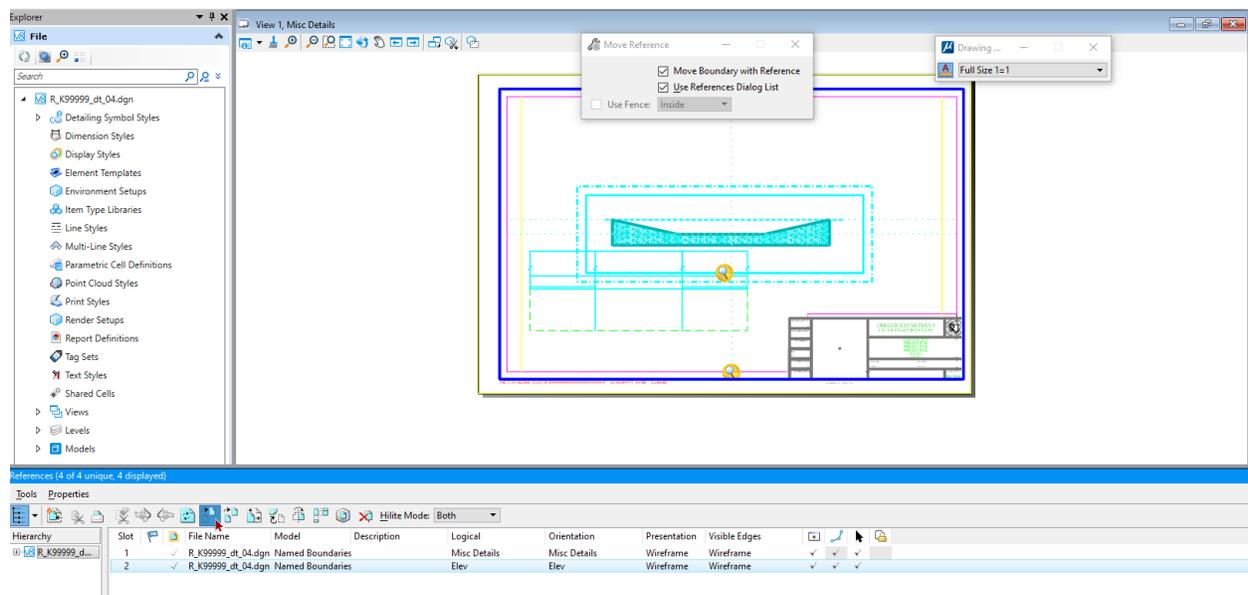

Return to the “Named Boundaries” model, and use “Create Drawing” in the **Named Boundaries** dialog, to add and position the other details in the same sheet.

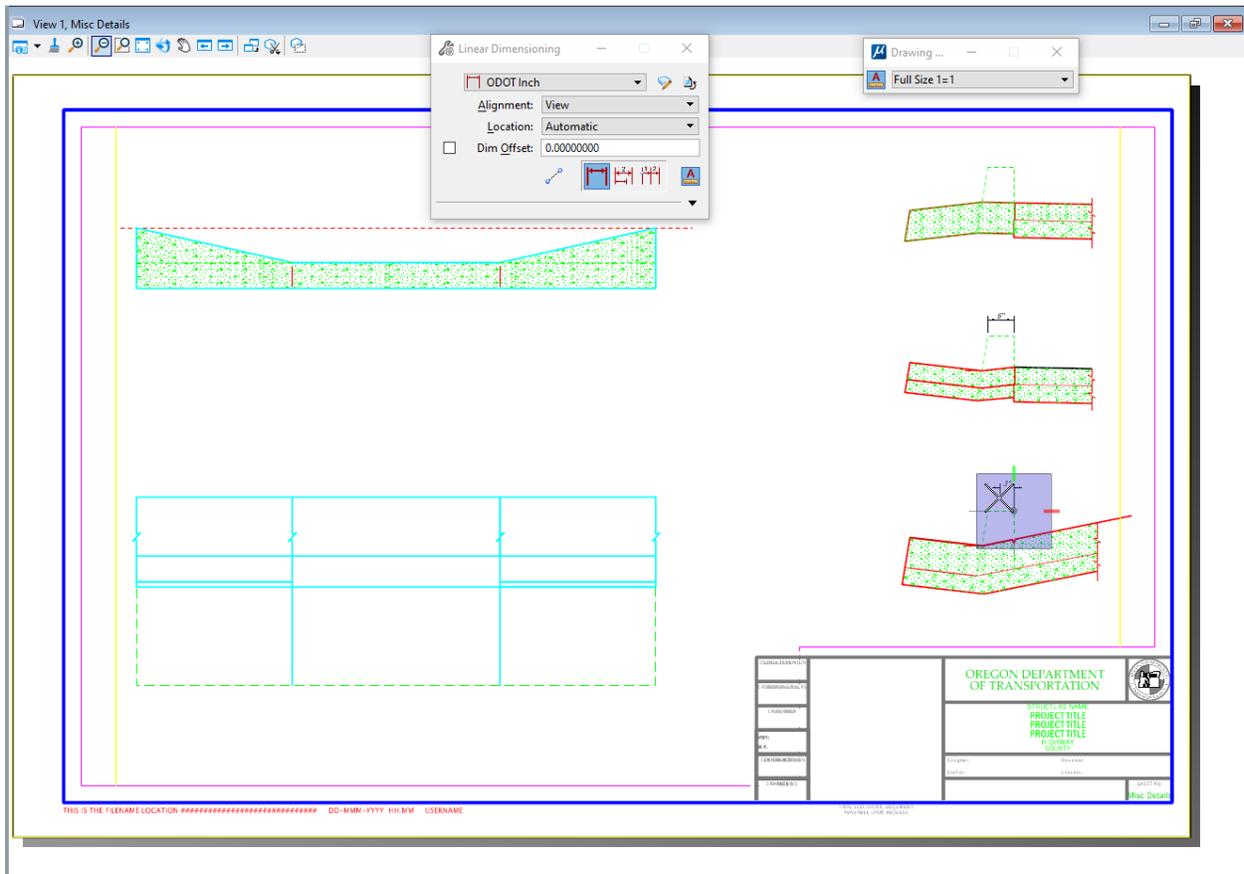

Annotations are most easily drawn directly into the sheet, where you can see how everything is positioned.