


Place Note for Exposure Labels with Text Favorites


Three “exposure” text favorites have been added to the WorkSpace for use in quickly placing a note with a curved leader and arrowhead to annotate the amount of exposure at specified locations. The Place Note command automatically opens the Text Editor and allows you to select a text favorite (★) to appear in the text editor. The “Exposure” text favorites will appear near the top of the list due to the use of an underscore; they all begin with “_E=”.

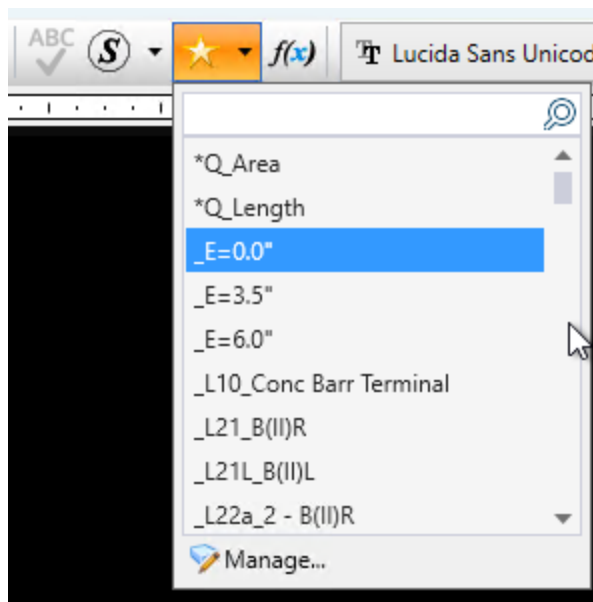

When you select the Place Note icon (highlighted in the dialog below), the standard dimension styles will use a curved leader. The Place Note tool settings dialog will remember how you used it last. The following is a workflow of the steps to place exposure text with a curved leader and an arrowhead.

Using the Place Note command in OpenRoads Designer

1. Set the active level to P_ODOT_PLAN_GeneralTx and ensure that the active color and weight are set to ByLevel.
2. Run the **Place Note** command from **Drawing Production>Annotate>Notes**.
3. Position the Text Editor so that the Place Note tool settings dialog is visible.
4. Set the tool settings (see picture below) to: **Place Note icon**; Dimension Style = **Plan Annotation with Arrowhead**; Start at: **Terminator**; toggle **on Association to Elements** and **Relative Associations**.

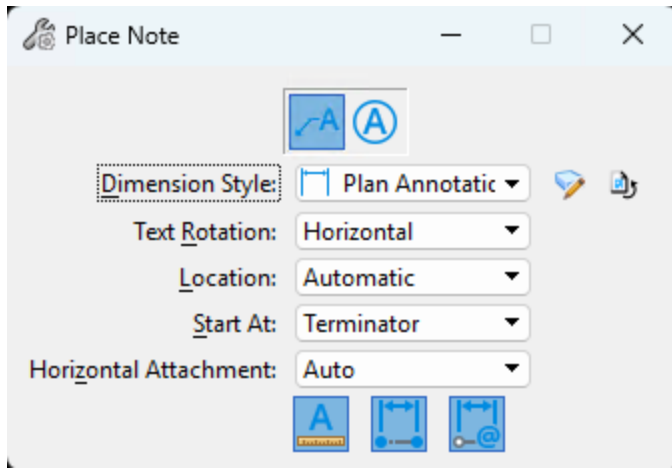

5. In the Text Editor window, select the Insert Favorite icon (★), then choose an Exposure value from the list.
6. Left click in the View window to select the location of the terminator arrowhead.
7. Left click a second time in the View window to select the location of the text.
8. When finished with that exposure value, right-click in the View window to clear the Text Editor.
9. To place other exposure values, perform steps 5 – 8 again.
10. Text may be edited to other values after placement.