
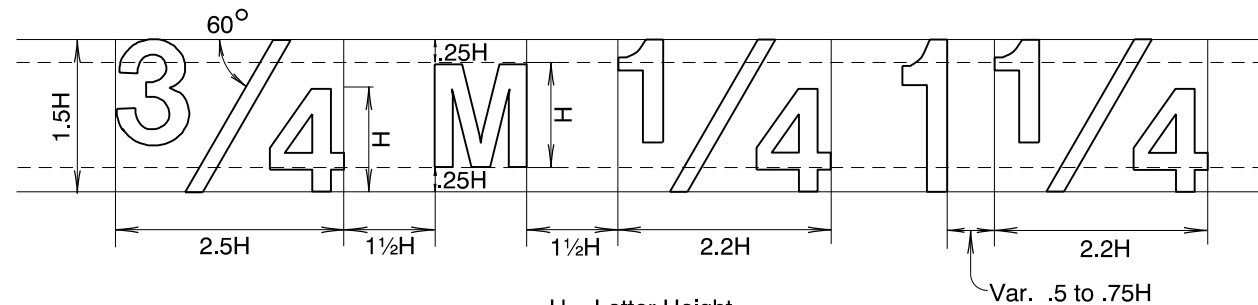
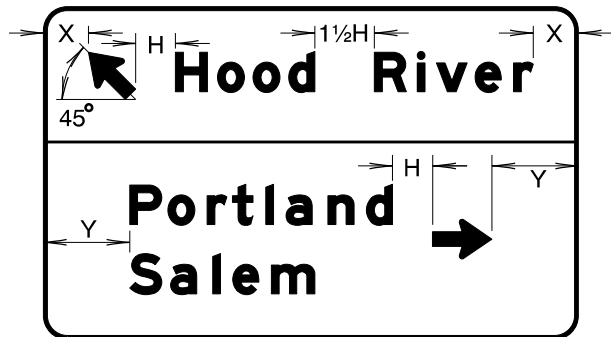
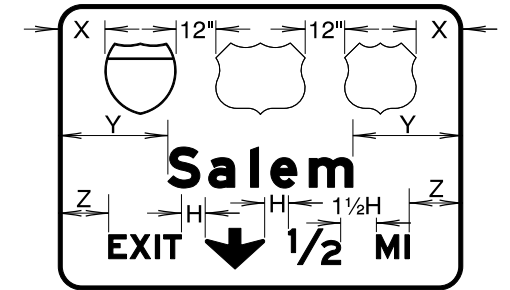
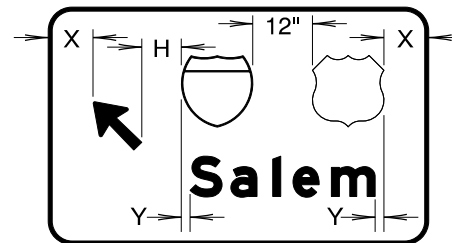
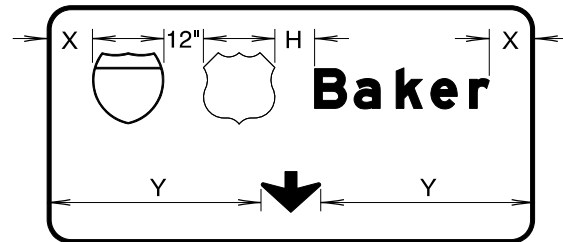
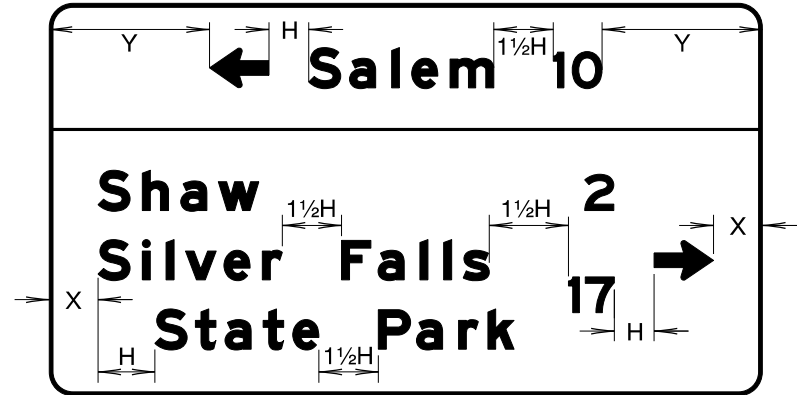
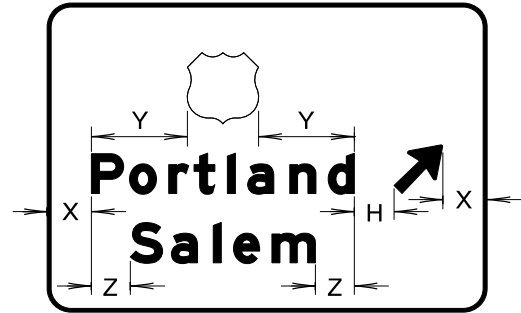
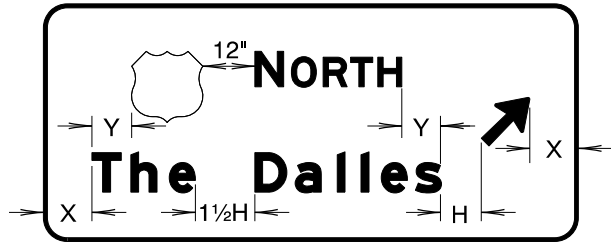
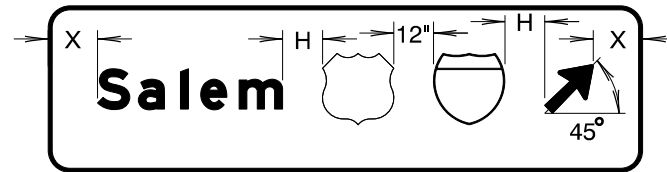
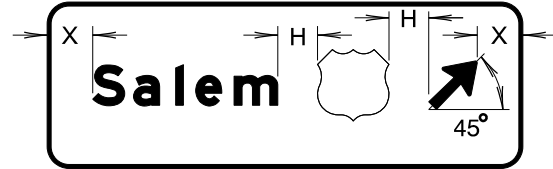


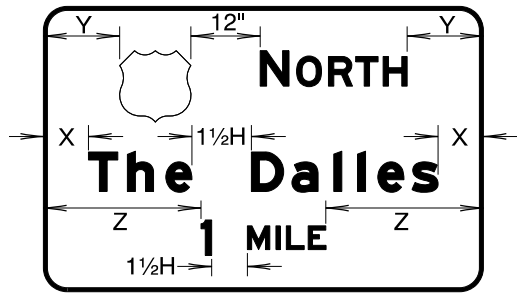

H = Letter Height

FRACTIONAL LAYOUT

Notes:
H = Height of upper case letter (not numeral) in each line of copy
X, Y, Z = 1/2 of remaining space
Sign examples shown here are not drawn to scale; but to illustrate the layout of the legend items.

X-Dimension should be approximately the same dimension as the letter Height (H). At a minimum the X-Dimension shall be no less than one-half the letter height (1/2 H)

Legends on freeway and expressway guide signs shall be all upper-case, or lower-case with initial upper-case series "E" modified letters as provided in the "Standard Alphabets for Highway Signs and Pavement Markings".

The selection and use of this Standard Drawing, while designed in accordance with generally accepted engineering principles and practices, is the sole responsibility of the user and should not be used without first consulting a Registered Professional Engineer.			
All materials shall be in accordance with the current Oregon Standard Specifications.			
OREGON STANDARD DRAWINGS			
FREEWAY/EXPRESSWAY DIRECTIONAL SIGN LAYOUT			
2024			
DATE	REVISION DESCRIPTION		
CALC. BOOK NO.	N/A	SDR DATE	06-JUL-2012
			TM224

Effective Date: June 1, 2026 – November 30, 2026